

 
# Firmware Update Procedure


This document describes how to update the firmware of AP-800AX.


The firmware can be updated using the Web Browser Interface of AP-800AX. Before you start, please make sure that both your PC and AP-800AX are connected.

- \* In this document, Windows 10 and the unified management software "AMC Manager®" are used as an example.
- \* The free version of AMC Manager® can be downloaded from our website.  
USA : <https://www.silextechnology.com/>  
China : <http://www.silex.com.cn/>

\*If you know the IP address of AP-800AX, the Web page of AP-800AX can directly be accessed from your Web browser. Enter the IP address to the address bar of your Web browser and go on to **2**.




**1** Start AMC Manager®, select AP-800AX from the device list and click the Web configuration icon .

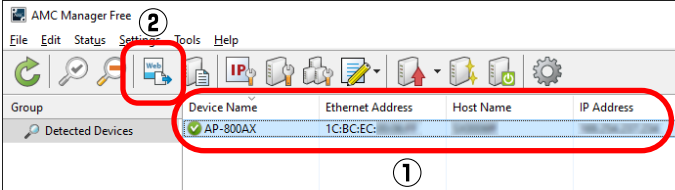


- \* When two or more AP-800AX units are displayed on AMC Manager®, identify the target one by checking it with IP address and MAC address.
- \* Display may vary depending on the Web browser.

**2** The login page is displayed. Enter the configured password and click **Login**.

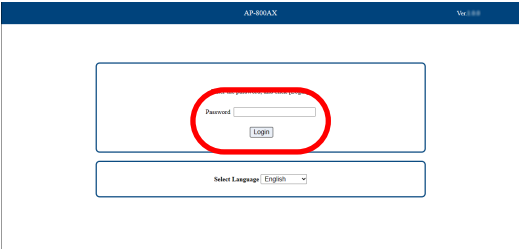


\* When the password configuration page is displayed, configure the password and then login.



**3** When the Web page of AP-800AX is displayed, click **Maintenance - Firmware Update**.

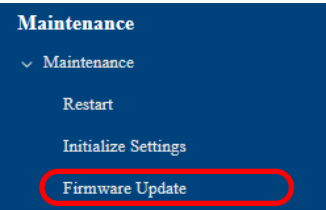

**4** The **Firmware Update** page appears. Click the button to the right of **New firmware**, and select the latest firmware (AP-800AX.bin) that has been downloaded to the PC, and click **Update**.

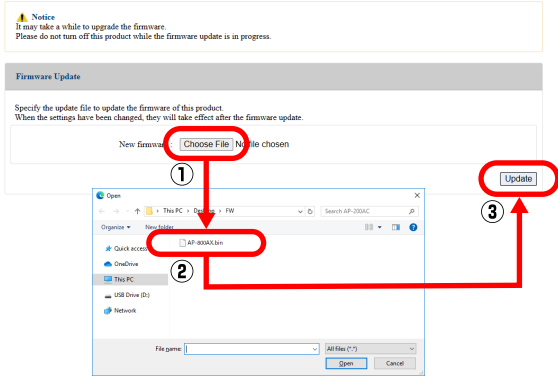

**5** The update confirmation message is displayed. Click **OK** to begin the firmware update. Please wait until the update is complete.

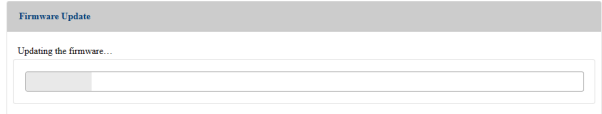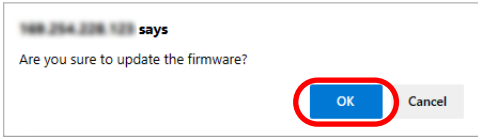

\* Do not turn off AP-800AX or close your Web browser while the firmware update is in process.

**6** When the login page is displayed, the firmware update is completed. See the top right of the login page and check the version information is changed.