 


# Firmware Update Procedure

This document describes how to update the firmware of SD-300 / SD-310AN / SD-320AN / SD-330AC.


The firmware can be upgraded using the Web Browser Interface of SD-300 / SD-310AN / SD-320AN / SD-330AC.

1. Start the Web browser on the PC.  
Enter the IP address of SD-300 / SD-310AN / SD-320AN / SD-330AC to the address bar.




- \* Above IP address is a sample address.  
Enter the IP address configured to SD-300 / SD-310AN / SD-320AN / SD-330AC.
- \* Display may vary depending on the Web browser.

2. The Web browser will run and the Web page will be displayed.  
In the left pane of the Web page, click **Login**.

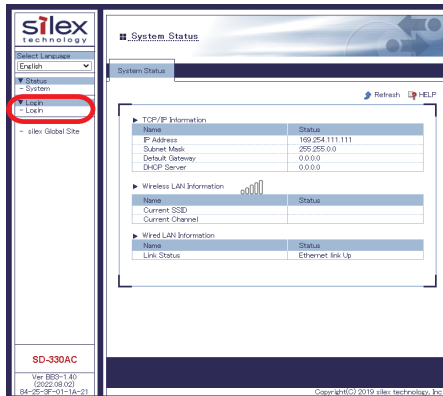


- \* When the password configuration page is displayed, configure the password.


3. In the login page, enter the **password** and click **Login**.

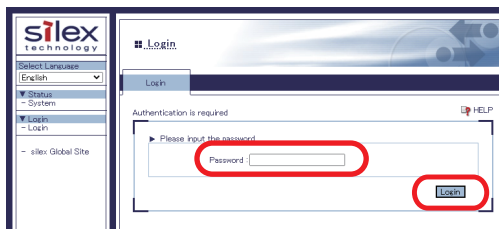


4. In the left pane of the Web page, click **Firmware Update**.

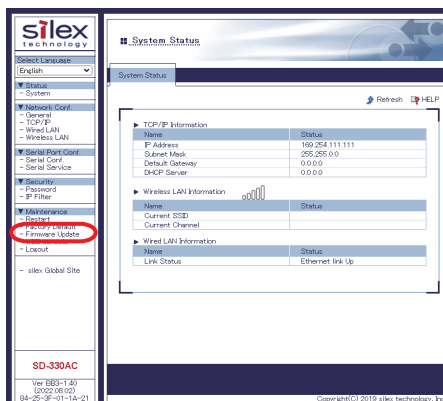

5. The **Firmware Update** page appears. Click the button to the right of **New firmware**, and select the latest firmware (SD-3xx.bin) that has been downloaded to the PC, and click **Update**.

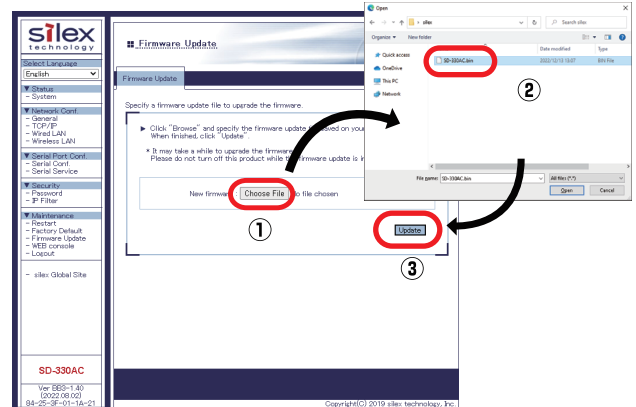

6. A confirmation message is displayed. Click **OK**.

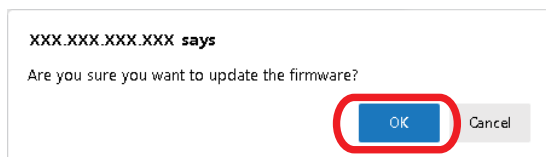

7. The firmware update will begin.



- \* Do not turn off SD-300 / SD-310AN / SD-320AN / SD-330AC or close your Web browser while the firmware update is in process.

8. When the system status page is displayed, the firmware update is completed.  
See the bottom left of the page and check that the version information is changed.

