Protocol Converter for CNC Machines FBR-100AN

User's Manual



Copyright© 2019 Silex Technology, Inc. All rights reserved. WA105390XG

Index

1. Introduction	.1
1-1. Introduction	1
Disclaimers	1
Trademarks	1
1-2. Safety Instructions	2
1-3. Product Information and Customer Services	7
Product Information	7
Customer Support Center	7
2. Specifications	.9
2-1. Features	10
2-2. Parts and Functions	11
2-3. Hardware Specifications	13
LED (Case Top)	14
DC Connector	16
LED (Network Port)	17
DIP Switch	18
Digital Input	19
Serial Port	20
2-4. Software Specifications	21
2-5. Wireless Specifications	23
2-6. Regulatory Compliance	25
2-7. Use of Radio Waves	27
Notes on Usage	27
2-8. Notes on Security	29
3. How to Configure FBR-100AN	31
3-1. Sample Connections	32
Individual Networks (Edge Mode)	32
Bridged Network (Bridge Mode)	33

5-2. Defote fou begitt	
3-2-1. Necessary Items (Only for Initial Configuration)	35
Necessary Items	35
Power ON	35
Changing Network Setting of PC	
3-2-2. Displaying FBR-100AN's Web Page	
3-3. Basic Configuration	40
3-3-1. Basic Configuration	40
Edge Setting	42
Bridge Setting	44
3-3-2. Detailed Bridge Setting	46
3-4. Using FBR-100AN as Wireless Station	49
3-4-1. Connecting Access Point by Using 'Easy Configuration'	50
3-4-2. Connecting Access Point by Using 'Detailed Configuration'	53
IEEE802.1X Authentication	55
3-5. Using AMC Manager [®] to Configure	57
3-6. Installing and Using FBR-100AN	58
4. List of Functions	59
4.1. Chausing Cystom Status	60
4-1. Showing System Status	
4-1. Showing System Status	61
 4-1. Showing System Status	61 62
 4-1. Snowing System Status	61 62 63
 4-1. Snowing System Status	61 62 63 63
 4-1. Snowing System Status	61 62 63 63 63
 4-1. Snowing System Status	61 62 63 63 63 64 65
 4-1. Snowing System Status	61 62 63 63 64 65 66
 4-1. Showing System Status	61 62 63 63 64 65 65 66 70
 4-1. Showing System Status	61 62 63 63 64 64 65 66 70 70
 4-1. Showing System Status	61 62 63 63 64 65 66 70 72
 4-1. Showing System Status	61 62 63 63 64 65 66 70 70 72 73

4-6. Time Setting	76
4-7. Serial Setting	78
4-8. Login Password Change	80
4-9. IP Address Filter	82
4-10. MAC Address Filter	85
4-11. Log Output	87
4-12. Packet Capture	
5. Maintenance Feature	
5-1. Factory Default Configuration	92
5-1-1. Factory Default Configuration Using Web Page	92
5-1-2. Factory Default Configuration Using Push Switch	94
5-2. Restart	95
5-2-1. Restart by Unplugging Cables	95
5-2-2. Restart Using Web Page	96
How to Restart FBR-100AN Using Web Page	96
5-3. Firmware Update	
5-3-1. Downloading Latest Firmware	
5-3-2. How to Update Firmware	
A. Appendix	
A-1. List of All Settings	104
A-1-1. Network Configuration	104
General - General Configuration	104
General - Bridge Detailed Configuration	108
Wireless LAN (STA) - Easy Configuration	109
Wireless LAN (STA) - Detailed Configuration	110
MTConnect Configuration - Common Configuration	115
MTConnect Configuration - Individual Configuration	116
MTConnect Configuration - Collective Configuration	119
MTConnect Configuration - agent Mode Configuration	122
MTConnect Configuration - AirGRID® Configuration	123

FTP Configuration	124
Time Configuration	125
A-1-2. Serial Configuration	126
General Configuration	126
A-1-3. Security Configuration	128
Login Password Configuration	128
IP Address Filter Configuration	128
MAC Address Filter Configuration	130
A-2. List of Error Codes	131
A-3. Activation	133
A-3-1. Registering Activation Key	133
A-3-2. Clearing Activation Key	135
A-4. Using OPC UA Activation	136
A-4-1. What is OPC UA?	136
A-4-2. Network Connection to Use OPC UA Activation	137
A-4-3. Showing OPC UA Status	138
A-4-4. OPC UA Setting	139
A-5. Using Modbus TCP Activation	141
A-5-1. Features of Modbus TCP	141
A-5-2. Communication for Using Modbus TCP Activation	142
A-5-3. Showing Modbus TCP Status	143
A-5-4. Modbus TCP Setting	144

1. Introduction

Thank you for purchasing "FBR-100AN" (hereinafter the "FBR-100AN"), the MTConnectcompatible protocol converter for CNC devices.

1-1. Introduction

This manual provides information on how to configure and use the FBR-100AN. Please read the **1-2. Safety Instructions** carefully before you begin.

Disclaimers

- The unauthorized transfer or copying of the content of this manual, in whole or in part, without prior written consent is expressly prohibited by law.
- The content of this manual is subject to change without notice.
- This manual was prepared to accurately match the content of each OS, but the actual information shown on the computer monitor may differ from the content of this manual due to future OS version upgrades, modifications, and other changes.
- Although every effort was made to prepare this manual with the utmost accuracy, Silex Technology will not be held liable for any damages as a result of errors, setting examples, or other content.

Trademarks

- AMC Manager[®] is a registered trademark of silex technology.
- AirGRID[®] is a registered trademark of PATLITE Corporation.
- Modbus[®] is a registered trademark of Schneider Electric Usa Inc.
- Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Wi-Fi, Wi-Fi Protected Setup (WPS), Wi-Fi Protected Access (WPA), WPA2 are trademarks or registered trademarks of Wi-Fi Alliance.
- Other company names and product names contained in this manual are trademarks or registered trademarks of their respective companies.

1-2. Safety Instructions

This page provides the safety instructions for safe use of FBR-100AN.

To ensure safe and proper use, please read the following information carefully before using FBR-100AN.

< Meaning of the warnings >

Danger	"DANGER" indicates an imminently hazardous situation that could result in death or serious injury if the safety instruction is not observed.
Warning	"Warning" indicates the existence of a hazard that could result in death or serious injury if the safety instruction is not observed.
Caution	"Caution" indicates the existence of a hazard that could result in serious injury or material damage if the safety instruction is not observed.

< Meaning of the symbols >

\bigwedge	This symbol indicates the warning and caution. (Example: "Danger of the electric shock")
\bigcirc	This symbol indicates the prohibited actions. (Example: Disassembly is prohibited")
	This symbol indicates the actions users are required to observe. (Example: "Remove the AC plug from an outlet")

Do not use this product in a place where flammable gas is generated. It may cause an explosion, fire, electric shock or malfunction. Make sure that foreign objects (metal, combustibles, liquids, etc.) do not get into this product. It may cause fire or electric shock. Do not install this product in an unstable place or do not stop installation halfway. This product may fall. If this product is not used according to the given instructions, the protection function may be lost. This product is not intended for use in applications requiring high reliability such as aviation, space, nuclear power, medical equipment, etc..

🕂 Warning

0	 In the following cases, turn off the connected devices and unplug the DC cable or AC plug of this product from a power outlet. Failure to follow these instructions may cause fire or an electrical shock. When this product emits a strange smell, smoke or sound or becomes too hot to touch. When foreign objects (metal, liquid, etc.) gets into this product. When this product is dropped or the case is broken or cracked.
	 Do not disassemble or modify this product. It may cause fire, electrical shock or malfunction. Do not disassemble or modify the AC adaptor (sold separately). It may cause fire, electrical shock or malfunction.
\bigcirc	 Do not place anything on top of this product. Also, do not place this product on top of the other product. Failure to do so may cause fire, electrical shock, malfunction or performance degradation. Do not cover up this product with a cloth such as blanket or table cloth. The heat remains inside and it may cause fire or malfunction. Do not place any objects on top of AC adapter or DC cable, or do not cover it up with anything. Also, do not use the AC adapter on top of the heat/moisture retaining materials (carpet, sponge, cardboard, styrofoam, etc.). The accumulated heat may result in fire or malfunction. Do not roll up or wrap DC cable or AC cord. It may cause fire or an electrical shock. Do not plug or unplug AC adaptor or DC cable with wet hands. It may cause an electrical shock or malfunction. Do not move this product when AC adapter or DC cable is connected to it. The cable may be damaged, and which may result in fire or electric shock.
	 For use of the devices connected to this product, please follow all warnings, cautions and notices given by that manufacturer and carefully use them in a proper manner. Failure to follow these instructions may cause fire, electrical shock or malfunction. Use the correct power voltage. Improper voltage may cause fire or an electrical shock. If a ground wire is supplied with your device to use with, connect it to the ground terminal in order to prevent an electrical shock. Do not connect the ground wire to gas pipe, water pipe, lighting rod or telephone ground wire. It may cause malfunction. Keep the cords and cables away from children. It may cause an electrical shock or serious injury. Make sure that you have a secure scaffold when this product is installed or removed to/from a high place. There is a danger of falling.



	 This product may become hot when it is in use. Be careful of the heat when moving or removing this product. Do not pull on the cable or AC cord to disconnect the DC cable or AC plug of the connected device or this product. The cable or code may be broken, which could result in fire or an electrical shock. Follow the law of each country when you discard this product. Verify all codes or cables are plugged correctly before using this product.
8	 When removing this product, disconnect the DC cable or AC plug of the connected device or this product from the outlet. When this product will not be used for a long time, unplug the DC cable or AC plug of the connected device or this product.

Silex Technology, Inc. shall not be responsible for any loss or damage you may suffer as a result of using this product (regardless of if it is described in this safety instruction or not).

1-3. Product Information and Customer Services

Product Information

The services below are available from the Silex Technology website. For details, please visit the Silex Technology website.

URL USA / Europe https://www.silextechnology.com/

- Latest firmware download
- Latest software download
- Latest manual download
- Support information (FAQ)

Customer Support Center

Customer Support is available for any problems that you may encounter. If you cannot find the relevant problem in this manual or on our website, or if the corrective procedure does not resolve the problem, please contact Silex Technology Customer Support.

Contact Information		
USA	support@silexamerica.com	
Europe	support@silexeurope.com	

• Visit the Silex Technology website (https://www.silextechnology.com/) for the latest FAQ and product information.

Note

(blank page)



FBR-100AN is a converter that monitors CNC machine tools and transfers the operating status to the factory monitoring system/server.

As the MTConnect communication is supported, which is the standard feature adopted by factory device manufacturers of the United States, CNC machine tools can efficiently be connected to the host system. By using a wired/wireless bridge function, cableless network can be established in a factory where cable wiring is not always easy.

Connection Image



2-1. Features

FBR-100AN has the following features:

- Sends the machine tool information in MTConnect format to the upper server system.
- Supports both wired LAN (2 interfaces) and wireless LAN (1 interface). The wired/ wireless LAN interfaces can be bridged.
- From acquisition of machine tool status through establishment of cableless network over wireless LAN, multiple processes can be done by FBR-100AN only.
- It is possible to freely define and configure the setting to retrieve the operating information from the FANUC CNC.
- As Serial I/F and digital input are supported, old models (legacy machine tool with FANUC CNC) can be connected.
- IP53 compatibility allows installation to outside of the control panel.
- SDK (non-free program) can be used to implement a special communication function and add a simple edge application.
- Supports the unified management software, AMC Manager[®] (non-free program) / AMC Manager[®] Free (free program).
- AirGRID[®] (the wireless communication system developed by Patlite Corporation) can be used for operation monitoring.
- By turning on FBR-100AN while the DIP Switch 4 is ON, the activation key can be registered. If the activation key is registered, the optional function (non-free) can be enabled. (For details on the optional function, refer to the product catalogue or visit the Silex Technology's website.)



Specifications of serial I/F and digital input differ for each device manufacturer. Customization may be required depending on the device.



For details on the AMC Manager®, please visit our homepage.

2-2. Parts and Functions

The parts name and functions are as follows:

Front



Тор



8 Antenna

9 Top LED

2-3. Hardware Specifications

Hardware Specifications

Wired LAN I/F	RJ-45 x 2 10Base-T / 100Base-TX / 1000Base-T x 2Port (Auto-sensing) AutoMDI/MDIX is supported.		
ROM	SPI Flash ROM 32MByte		
RAM	DDR3L SDRAM Memory 256MByte		
ММС	eMMC 2GByte (Pseudo SLC)		
	Network port	LED x 2	
		Link LED Status LED	: Green : Orange
LED		LED x 4	
	Top of the unit	PWR(Power) LED WLAN LED Serial LED CNC LED	: Red/Green/Orange : Red/Green/Orange : Red/Green/Orange : Red/Green/Orange
Puch Switch	Push switch x 1		
rush switch	Dip switch x 4		
Antenna	Wireless LAN	Eternal antenna 2.4GHz / 5GHz dual ba	nd
Dimension	W : 230mm x D : 105mm x H : 36mm (unit size)		
EMI	VCCI Class-A		
Dowor	DC jack (DC 12Vin ±5%)		
Power	DC connector (DC 24Vin ±5%)		
Serial I/F	RS-232C/RS-422A/RS-485 (D-Sub 9pin)		
Digital Input I/F	Photocoupler isolated input x 3		



For RS-485, only the physical interface is supported. To use RS-485, it needs to be added from the firmware.

Note

Operating/Storage Environment

Operating environment	Temperature : -20°C to 50°C
Operating environment	Humidity : 20% to 90%RH (Non-condensing)
Storage environment	Temperature : -20°C to 55°C
	Humidity : 20% to 90%RH (Non-condensing)

Ċ Note When wireless LAN is not used, or when a large amount of data is not transmitted or received continuously over wireless LAN (e.g. when only CNC operating status data is transferred), FBR-100AN can withstand the temperature up to 55 degrees.



PWR LED

Shows the power status and operating status of FBR-100AN.

Status		Meaning		
Off		FBR-100AN is powered off.		
Green On Blink	On	FBR-100AN is powered on.		
	Blink	Firmware update is in progress.		
Orange	On	Factory default configuration is in progress (initialization / eMMC format)		
	Blink	-		
Red	On	(FBR-100AN is started with a recovery firmware.)		
	Blink	Hardware error - Wireless error - eMMC mount failure		

WLAN LED

Shows the network status.

Status		Meaning	
Off		-	
Green	On	FBR-100AN is connected to wireless LAN. (Signal strength: 3, RSSI: -63dBm or higher)	
	Blink	Data communication is in progress. (Signal strength: 3, RSSI: -63dBm or higher)	
Orange	On	FBR-100AN is connected to wireless LAN. (Signal strength: 2, RSSI: -78dBm to -64dBm)	
	Blink	Data communication is in progress. (Signal strength: 2, RSSI: -78dBm to -64dBm)	
Red	On	FBR-100AN is connected to wireless LAN. (Signal strength: 1, RSSI: -79dBm or lower)	
	Blink	Data communication is in progress. (Signal strength: 1, RSSI: -79dBm or lower) Or wireless I AN is enabled but Access Point is not connected.	



• To make sure of stable wireless communication, it is recommended to use FBR-100AN in the environment at which the WLAN LED turns green.

Serial LED

Shows the serial communication status.

Status		Meaning	
Off		No serial communication is in progress.	
On		RS-232C is operating.	
Green	Blink	RS-232C is handling data transmission/reception.	
Orange	On	RS-422A is operating.	
	Blink	RS-422A is handling data transmission/reception.	
Red	On	Error status - Serial communication value error	
	Blink	Data transmission/reception is in progress after the error status occurs.	

CNC LED

Shows the CNC device connection status.

Status		Meaning	
Off		CNC device or adapter device is not connected (IP address is not configured.)	
On Green		CNC device or adapter device is connected (Data collection is completed successfully.) When the data acquisition mode is AirGRID®, WDR is connected.	
	Blink	-	
Orange	On	-	
	Blink	-	
Red	On	Error status - Data acquisition failure	
	Blink	-	

DC Connector



PIN Number	Signal Name	Description
1	DCIN	DC 12-24Vin ±5%
2	GND	GND

DC connecter : JST S02B-F32SK-GGXR(LF)(AU)

For this connector, please use JST JFA connector J300 series F32FSS-02V-KX.

LED (Network Port)



Link LED

Shows the wired LAN link status.

Status		Meaning
Green	On	Wired LAN is linked.
	Off	Wired LAN is not linked.

Status LED

Shows the wired LAN communication status.

Status		Meaning
Orange	Blink	The packet is received from wired LAN.

DIP Switch



Switch Number	Function	
1	Switches the serial mode. On: RS-422A Off: RS-232C	
2	Switches the serial termination resistor. On: Serial termination (120 Ω for RXD signal) Off: None	
3	Not in use	
4	Enables/Disables activation for the optional function (non-free). On : Enable (The activation key needs to be registered.) Off : Disable	

Digital Input



Signal	Note
DINO	
DIN1	Turns ON when the external input is Low, and turns OFF when it is High.
DIN2	

Input equivalent circuit



Serial Port



PIN Number	RS-232C	RS-422A/RS-485
1	DCD [in]	TxD- [out]
2	RxD [in]	TxD+ [out]
3	TxD [out]	RxD+ [in]
4	DTR [out]	RxD- [in]
5	GND [-]	GND [-]
6	DSR [in]	-
7	RTS [out]	-
8	CTS [in]	-
9	RI [in]	-

2-4. Software Specifications

	Network Layer	ARP, IP, ICMP, FLDP
	Transport Layer	TCP, UDP
Basic Protocols	Application Layer	DHCP, HTTP, NTP, TFTP, HTTPS, FTP(C/S), JCP, MTConnect(ver 1.3.1), SX-SMP * JCP and SX-SMP are Silex Technology's proprietary protocols.
Recommended Web Browser	Internet Explorer11 Microsoft Edge	
Supported Languages	English/Japanese	
Recommended MTConnect utility	FANUC MTLINKi (ver 3.6)
Recommended FTP server compatible utility	FFFTP (ver 2.0.0)	

FANUC CNC Compatible Models

	FANUC Series 30i-MODEL B FANUC Series 31i-MODEL B FANUC Series 31i-MODEL B5 FANUC Series 32i-MODEL B FANUC Series 35i-Model B
Network compatible	FANUC Series 30i-MODEL A FANUC Series 31i-MODEL A FANUC Series 31i-MODEL A5 FANUC Series 32i-MODEL A
	FANUC Series 0i-M/T MODEL F FANUC Series 0i-M/T MODEL D
	FANUC Series 16i/18i/21i * To access the CNC device using FOCAS1/2, the Ethernet function is required.
Serial/DPRNT compatible	FANUC Series 15 FANUC Series 16/18/20/21 FANUC Power Mate -D/F/H FANUC Series 16i/18i/21i FANUC Power Mate i FANUC Power Mate i FANUC Series 15i FANUC Series 0i FANUC Series 0i FANUC Series 30i/31i/32i
	may not be supported.

2-5. Wireless Specifications

Wireless LAN I/F

	Frequency	5GHz band
	Transmission Method	OFDM
	Transmission Rate	54 / 48 / 36 / 24 / 18 / 12 / 9 / 6 (Mbps)
IEEE802.11a	Channel	[US] W52 : 36, 40, 44, 48 W53 : 52, 56, 60, 64 W56 : 100, 104, 108, 112, 116, 132, 136, 140 W58 : 149, 153, 157, 161, 165 [EU] W52 : 36, 40, 44, 48 W53 : 52, 56, 60, 64 W56 : 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140
	Frequency	2.4GHz band
	Transmission Method	DS-SS
IEEE802.11b	Transmission Rate	11 / 5.5 / 2 / 1 (Mbps)
	Channel	[US]1-11ch [EU]1-13ch
	Frequency	2.4GHz band
IEEE802.11g	Transmission Method	OFDM
	Transmission Rate	54 / 48 / 36 / 24 / 18 / 12 / 9 / 6 (Mbps)
	Channel	[US]1-11ch [EU]1-13ch
	Frequency	5GHz band
	Transmission Method	MIMO-OFDM
	Transmission Rate	MCS0, 1, 2, 3, 4, 5, 6, 7 (1Stream) MSC8, 9, 10, 11, 12, 13, 14,15 (2Stream)
IEEE802.11n (5GHz)	Channel	[US] W52 : 36, 40, 44, 48 W53 : 52, 56, 60, 64 W56 : 100, 104, 108, 112, 116, 132, 136, 140 W58 : 149, 153, 157, 161, 165 [EU] W52 : 36, 40, 44, 48 W53 : 52, 56, 60, 64 W56 : 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140

IEEE802.11n (2.4GHz)	Frequency	2.4GHz band
	Transmission Method	MIMO-OFDM
	Transmission Rate	MCS0, 1, 2, 3, 4, 5, 6, 7 (1Stream) MSC8, 9, 10, 11, 12, 13, 14,15 (2Stream)
	Channel	[US]1-11ch [EU]1-13ch

Wireless Security

STA Mode (Wireless Station)	Open (WEP 64/128Bit) Shared (WEP 64/128Bit) WPA2-PSK (AES) WPA/WPA2-PSK (TKIP/AES) WPA2-EAP (AES)
	WPA/WPA2-EAP (TKIP/AES)

2-6. Regulatory Compliance

FCC / IC Notice



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3(A)/NMB-3(A)

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

(1) This device may not cause interference; and

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1) l'appareil ne doit pas produire de brouillage;

2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CE Notice

((

2-7. Use of Radio Waves

Notes on Usage

Do not use FBR-100AN near the following devices or places.

- Microwave, scientific instruments, pacemaker or other medical equipment, etc.
- Licensed radio station in a factory
- Small power radio station (A non-licensed radio station)

These devices may use the same band. If you use FBR-100AN near these devices, the radio waves emitted from FBR-100AN may interfere with them.

Do not use FBR-100AN near a cellular phone, TV or Radio.

A cellular phone, TV and radio use a different radio band than our products. Generally, if they are used near FBR-100AN, it will not cause any problems. However, when they approximate FBR-100AN, sound or image noise may occur.

If there is reinforced concrete/metal between wireless devices, they may not connect.

FBR-100AN can connect through wood or glass, but may have troubles connecting through reinforced concrete/metal.

FBR-100AN complies with the certification of conformance to technical standards. Please pay attention to the following points:

- Please do not disassemble or remodel the product. Such action is prohibited by law.
- Please do not remove the certificate label. Using the product without a label is prohibited.

Wireless devices using 2.4GHz band

The same frequency band of FBR-100AN is used for a microwave, industry, science, medical equipment and licensed in room or low power (non-licensed) radio stations.

- Before you use FBR-100AN, check that it does not interfere with other devices.
- If interference occurs, stop using FBR-100AN or change the wireless band. Please consider to create a wall between these devices to avoid interference. Contact us for possible solution.
 - * The meaning of the symbols in the bottom of the unit:

2.4	DS/OF	4

2.4	: Wireless devices using 2.4GHz frequency band	
DS/OF	: DS-SS or OFDM is used as modulation.	
4	: The range of interference is equal to or lower than 40m.	
	: All bands can be used to avoid interference.	

Notes on using 5GHz band

• Use of 5.2GHz band (W52) and 5.3GHz band (W53) outdoors is prohibited by the radio regulations. Use only W56 channels then.

2-8. Notes on Security

Because a wireless LAN uses electromagnetic signals instead of a network cable to establish communication with network devices, it has the advantage of allowing devices to connect to the network easily. However, a disadvantage of this is that within a certain range, the electromagnetic signals can pass through barriers such as walls, and if security countermeasures are not implemented in some way, problems such as the following may occur.

- Communication is intercepted by a third party
- Unauthorized access to the network
- Leakage of personal information (ID and Card information)
- Spoofing and the falsification of intercepted data
- System crashes and data corruption

Nowadays, wireless LAN cards or access points are equipped with security measures that address such security problems, so that you can enable security-related settings for wireless LAN products in order to reduce the likelihood of problems occurring.

We recommend that you make yourself fully acquainted with the possible implications of what might happen if you use a wireless product without enabling security features, and that you configure security-related settings and use wireless products at your own responsibility. (blank page)
3. How to Configure FBR-100AN

This chapter explains how to configure FBR-100AN.

3-1. Sample Connections

Wired LAN (2 interfaces) and wireless LAN (1 interfaces) of FBR-100AN can be used separately to configure the individual network. Also, it is possible to bridge the interfaces to configure the combined network. The followings are the sample connections. Configure FBR-400AN appropriately for your environment.

Individual Networks (Edge Mode)

Assign IP address and subnet mask for each interface to configure individual network. In the Edge mode, the operating information can only be retrieved from the machine tools and be transferred to the PC. In the sample connection below, it is impossible to access the machine tools from PC-01 or PC-02.



Bridged Network (Bridge Mode)

The wired devices can be connected to a wireless LAN environment.

By connecting the network HUB to a wired LAN port of FBR-100AN, up to 16 wired devices can be connected to the wireless LAN at the same time. For the MAC address to use for wireless LAN connection, the MAC address of FBR-100AN will be used.



By selecting **Wired Only** for **Add to Bridge**, it is possible to enable the bridge for wired LAN only.



3-2. Before You Begin

The following explains the preparation for configuration.

3-2-1. Necessary Items (Only for Initial Configuration)

Necessary Items

Following items are required for initial configuration.

PC
Network cable

Power ON

1. Connect one end of network cable to LAN1 of FBR-100AN and the other end to PC.

2. Turn on FBR-100AN.

Confirm that the PWR LED turns green on top of FBR-100AN.

3. Turn on the PC.



Changing Network Setting of PC

The following explains how to modify PC network settings so that you can access FBR-100AN from your PC.

The default IP address of FBR-100AN is 192.168.1.1 (Class C). For the IP address of the PC, configure the different one that is not used by FBR-100AN.

Example) Network settings Set up the network settings of your PC as follows: IP address : 192.168.1.123 Subnet mask : 255.255.255.0

3-2-2. Displaying FBR-100AN's Web Page

The network settings of FBR-100AN can be configured from its Web configuration interface. By entering the IP address of FBR-100AN to the address bar of your Web browser, the Web configuration page can be accessed.

1. Start the Web browser on the PC.



2. Enter the IP address of FBR-100AN (xxx.xxx.xxx) to the address bar.



3. The login password configuration page will be displayed. Enter the login password to configure for FBR-100AN and click **Submit**.





The login password configuration page is displayed only when FBR-100AN is configured for the first time.

4. When the login page is displayed, enter the login password you have configured for **Password** and click **Login**.

_		
	Enter the password, and click [Login].	
	Password	
	Login	
	Select Language English V	



• By default, the login password is not set. Just click **Login** then.

Note

5. When the Web page is displayed, select the network setting you want to configure from the configuration menu.

silex technology	System Status		
English V	System Status		
▼ Status - System - Wireless LAN(STA) - MTConnect			🌶 Refresh 🛯 📴 HELP
Thistoch Card	 System Status 		
 General 	Name	Status	
- Wireless LAN(STA)	Product Name	FBR-100AN	
- MTConnect	Loader	HW01	
- FTP	Version	1.2.0a1	
- Time	MAC Address	84:25:31:01:31:33	
▼ Serial Conf.	Host Name	FBR-013133	
– General	LAN Port1		
	IP Address	172.25.73.228	
 Security Cont. 	Subnet Mask	255.255.0.0	
- IP Address Filter	LAN Port2		
- MAC Address Filter	IP Address	0.0.0.0	
	Subnet Mask	0.0.00	
▼ Management	WLAN Port		
- Packet Canture	IP Address	169.254.24.130	
T datet cap tare	Subnet Mask	255,255.0.0	
▼ Maintenance	Default Gateway	0.0.00	
– Setting Initialization – Restart – Firmware Update			

Config	juration menu	Details
Select Language		Switches the language between English and Japanese.
	System	Shows the system information.
Status	Wireless LAN(STA)	Shows the wireless station setting. When a wireless interface is disabled, it is not displayed.
	MTConnect	Shows the MTConnect setting.

Confi	iguration menu	Details
	General	Configure the basic network setting.
	Wireless LAN(STA)	Configure the setting to use FBR-100AN as a wireless station.
Network Conf	MTConnect	Configure the MTConnect setting.
	FTP	Configure the FTP setting.
	Time	Configure the time setting.
Serial Conf	General	Configure the serial setting.
Security Conf	Login Password	Login password can be changed.
	IP Address Filter	The access from the specified device to FBR- 100AN can be restricted using the IP address filter.
	MAC Address Filter	The access from the specified device to FBR-100AN can be restricted using the MAC address filter.
Managamant	Log Output	Obtains the system log.
Management	Packet Capture	Obtains the network packet.
	Setting Initialization	Executes the factory default configuration and then restarts FBR-100AN.
Maintenance	Restart	Restarts FBR-100AN.
	Firmware Update	Updates the firmware.
Logout		Logs out the Web page.

3-3. Basic Configuration

3-3-1. Basic Configuration

Configure the network settings appropriate for your environment.

1. Open your Web browser and access the FBR-100AN's Web page.



For details on how to access the FBR-100AN's Web page using the Web browser, refer to 3-2-2. Displaying FBR-100AN's Web Page.

2. Click General from the configuration menu.



3. The **General Configuration** page is displayed.

General Configuration	
General Configuration Bridge Detailed Config	uration
	P HELP
Device Configuration Name	Value
Host Name Wireless Interface Network operation mode Default Gateway Link Speed Port1 Link Speed Port2	FBR-013133 DISABLE Edge 0.0.0 AUTO AUTO
 Name Resolve Protocols Configuration Name 	n Value
DNS Suffix	

Select the operation mode at **Network operation mode** appropriately for your environment. The setting items will differ depending on the selected operation mode.

Name) (alum
Name	value
Host Name	FBR-013125
Wireless Interface	ENABLE V
Network operation mode	
Default Gateway	0.0.0.0
Link Speed Port1	AUTO 🗸
Link Speed Port2	AUTO V

To configure the edge setting, select **Edge**. To configure the bridge setting, select **Bridge**.

Edge Setting

Configure the IP address/subnet mask for each interface.

1. Select **Edge** for the **Network operation mode**.

Device Configuration	
Name	Value
Host Name	FBR-013125
Wireless Interface	
Network operation mode	
Link Sneed Port1	
	AOTO +

2. Configure each setting.

Name	Value
DNS Suffix DNS Server (Primary) DNS Server (Secondary)	0.000
LAN Port1	
Interface Configuration	Value
DHCP Client IP Address Subnet Mask	DISABLE
LAN Port2	
Interface Configuration	Value
DHCP Client IP Address Subnet Mask	DISABLE 192.168.2.1 255.255.0
WLAN Port	
Interface Configuration	Value
DHCP Client IP Address Subnet Mask	ENABLE V



When **Edge** is selected for **Network operation mode**, set an IP address of different segment for LAN Port1 and LAN Port2. If an IP address of the same segment is set, only one of LAN Port1 or LAN Port2 will be valid (the other LAN port will work with the link local address 169.254.xxx.xxx/16).



The WLAN port setting is displayed only when **ENABLE** is selected for **Wireless Interface**.

3. Check the settings and click **Submit**.



- The entered settings will be cleared if other configuration items are clicked on the menu. To save the entered settings, click **Submit**.
- **Note** The new setting will take effect when FBR-100AN is turned on next time.
- **4.** The confirmation message for restart is displayed. To continue the configuration, click the setting item you want to configure from the menu. Click **Restart** to take effect of the new setting when the necessary configuration is finished.



5. When the restart is finished and the login page of FBR-100AN is displayed again, the configuration is completed.

Enter the password, and click (Login).
Password
Login
L
Select Language



 If the IP address or network operation mode is changed on FBR-100AN and which does not allow communication from the PC, the login page is not displayed.

Bridge Setting

1. Select Bridge for the Network operation mode.

Name	Value
Host Name	FBR-013125
Network operation mode	

2. Configure each setting.

Name	Value
DNS Suffix	
DNS Server (Primary)	0.0.0.0
DNS Server (Secondary)	0.0.0
Bridge Port	
Interface Configuration	Value
Interface Configuration	Value
Interface Configuration Add to Bridge	Value
Interface Configuration Add to Bridge DHCP Client	Value All Wired Only Custom DISABLE Image: Custom
Interface Configuration Add to Bridge DHCP Client IP Address	Value ○ All ● Wired Only ○ Oustom DISABLE ▼ 192.168.3.1



• When **Custom** is selected for **Add to Bridge**, two or more interfaces need to be selected.

 When a wireless LAN is included as an interface to bridge, the wireless setting needs to be configured at Wireless LAN(STA).



- For details on each configuration item, refer to A-1. List of All Settings.
- **3.** Check the settings and click **Submit**.





- The entered settings will be cleared if other configuration items are clicked on the menu. To save the entered settings, click **Submit**.
- **Note** The new setting will take effect when FBR-100AN is turned on next time.

4. The confirmation message for restart is displayed. To continue the configuration, click the setting item you want to configure from the menu. Click **Restart** to take effect of the new setting when the necessary configuration is finished.



5. When the restart is finished and the login page of FBR-100AN is displayed again, the configuration is completed.

Enter the password, and click [Login].
Porqueard
rassworu
Login
Select Language
English

 If the IP address or network operation mode is changed on FBR-100AN and which does not allow communication from the PC, the login page is not displayed.

Note

3-3-2. Detailed Bridge Setting

When there is a device that does not respond to the MAC Address broadcast, edit the address management table.

1. Open your Web browser and access the FBR-100AN's Web page.



 For details on how to access the FBR-100AN's Web page using the Web browser, refer to 3-2-2. Displaying FBR-100AN's Web Page.

2. Click General from the configuration menu.



3. Click Bridge Detailed Configuration.



4. Register the device information to the address management table (up to 16 devices).





- If multiple MAC addresses are set for one IP address, packets cannot be transferred correctly.
- Only IPv4 (Internet Layer), TCP/UDP (Internet Layer), and ARP (Link Layer) of TCP/IP Protocols are guaranteed for transmission. Other protocols are not guaranteed.
- For application-layer protocols, DHCP, FTP, SMPD, HTTP, HTTPS, CNC are guaranteed for communication. Other protocols are not guaranteed.





5. Check the settings and click Submit.





- The entered settings will be cleared if other configuration items are clicked on the menu. To save the
 entered settings, click Submit.
- **Note** The new setting will take effect when FBR-100AN is turned on next time.

6. The confirmation message for restart is displayed. To continue the configuration, click the setting item you want to configure from the menu. Click **Restart** to take effect of the new setting when the necessary configuration is finished.

To	Setting is completed. take effect of this setting, please restart. Restart
TIP	• Do not turn off FBR-100AN when the restart is in progress.
P Note	• FBR-100AN can also be restarted by clicking Restart from the configuration menu.

7. When the restart is finished and the login page of FBR-100AN is displayed again, the configuration is completed.

Enter the password, and click [Login].
Password
Login
Select Language
English 🗸



• If the IP address or network operation mode is changed on FBR-100AN and which does not allow communication from the PC, the login page is not displayed.

3-4. Using FBR-100AN as Wireless Station

The following explains how to use FBR-100AN as a wireless station.

1. Open your Web browser and access the FBR-100AN's Web page.



 For details on how to access the FBR-100AN's Web page using the Web browser, refer to 3-2-2. Displaying FBR-100AN's Web Page.

2. Click Wireless LAN(STA) from the configuration menu.



3. The Easy Configuration page of Wireless LAN(STA) is displayed.

Configurati	n Detailed Configuration				
following is	the procedure to configure the wireless LAN settings.				📭 HE
1 0-1					
I. Sei	ct a w reless network.				
Wirele	ss Network List Search Wireless Networks				
Select	SSID	Wireless Signal Strength	СН	Wireless Standard	^
0	SILEX_AP-511AC-1	ഫിവി	36	11na	
0	SILEX_AP-511AC-2		52	11na	0
		- 00			

From the following options, select a method to connect to Access Point.

To select the destination device from a list of discovered networks: Go on to 3-4-1. Connecting Access Point by Using 'Easy Configuration'.

To specify the destination device to connect:

Go on to 3-4-2. Connecting Access Point by Using 'Detailed Configuration'.

3-4-1. Connecting Access Point by Using 'Easy Configuration'

From a list of the discovered wireless networks, select one to connect.



- When the Access Point has one of the following settings, it cannot be connected using the 'Easy Configuration' feature. Refer to 3-4-2. Connecting Access Point by Using 'Detailed Configuration' then. - WEP key is used and WEP key index of the Access Point is other than 1.
- Network authentication method is set to Shared, WPA2-EAP or WPA/WPA2-EAP.
- Stealth function is enabled on the Access Point.

1. Click **Wireless LAN(STA)** from the configuration menu and click **Easy Configuration**.



When the **Easy Configuration** page is already displayed, this process is not necessary.



2. The **Easy Configuration** page is displayed and wireless networks are detected.

Station Configuration		
sy Configuration Detailed Conf	iguration	
he following is the procedure to a	configure the wireless LAN settings.	En HEL
1. Select a wireless netw	ork.	
 Wireless Network List 	Search Wireless Networks	
Searching…		
Please wait for a while	<u>.</u>	
Please wait for a while 2. Enter the Network Key	х	

3. From a list of the discovered wireless networks, select one to connect and then enter the network key.



- In the wireless network list, up to 32 Access Points are displayed in the order of higher signal strength.
- When the network key of the Access Point is already registered to FBR-100AN, such Access Point is displayed in the top of the list, regardless of the signal strength.
 - To refresh the wireless network list, click Search Wireless Networks.
 - When the network authentication method of Access Point is set to **WPA-PSK** or **WPA2-PSK**, network authentication and encryption mode of FBR-100AN are set to **WPA/WPA2-PSK** and **AUTO** respectively.
- 4. Check the settings and click Submit.

Æ



5. The confirmation message for restart is displayed.

To continue the configuration, click the setting item you want to configure from the menu. Click **Restart** to take effect of the new setting when the necessary configuration is finished.

	Setting is completed. take effect of this setting, please restart. Restart
TIP	• Do not turn off FBR-100AN when the restart is in progress.
P Note	• FBR-100AN can also be restarted by clicking Restart from the configuration menu.

6. When the restart is finished and the login page of FBR-100AN is displayed again, the configuration is completed.

Enter the password, and click [Login].
Password
Login
Calact I year year
English V

If the IP address or network operation mode is changed on FBR-100AN and which does now allow communication from the PC, the login page is not displayed.

Note

3-4-2. Connecting Access Point by Using 'Detailed Configuration'

Configure the setting to connect the Access Point in wireless LAN.

1. Click **Wireless LAN(STA)** from the configuration menu and click **Detailed Configuration**.



2. In the **Detailed Configuration** page, configure each setting.

Station Configuration		
Configuration Detailed Configura	ion	
		ا و ت
 Wireless I AN Basic Configuration 		
Name	Value	
SSID Network Authentication	SSID Open V	
WEP Configuration		
Name	Value	
WEP Key Index WEP Key1 WEP Key2	OFF V	
WEP Key3		

• For details on each configuration item, refer to A-1. List of All Settings.

• FBR-100AN supports the IEEE802.1X authentication. For information on the compatible authentication **Note** methods and certificates, refer to **IEEE802.1X Authentication**.

3. Check the settings and click **Submit**.



• The entered settings will be cleared if other configuration items are clicked on the menu. To save the entered settings, click **Submit**.

- **Note** The new setting will take effect when FBR-100AN is turned on next time.
- **4**. The confirmation message for restart is displayed.

To continue the configuration, click the setting item you want to configure from the menu. Click **Restart** to take effect of the new setting when the necessary configuration is finished.

	 Setting is completed. To take effect of this setting, please restart.
[Restart
TIP	• Do not turn off FBR-100AN when the restart is in progress.
Not	 FBR-100AN can also be restarted by clicking Restart from the configuration menu.

5. When the restart is finished and the login page of FBR-100AN is displayed again, the configuration is completed.

Γ
Enter the password, and click [Login].
Password
Loein
L
Select Language
English

• If the IP address or network operation mode is changed on FBR-100AN and which does now allow communication from the PC, the login page is not displayed.

IEEE802.1X Authentication

FBR-100AN supports the following IEEE802.1X authentication methods. IEEE802.1X can be used when **Network Authentication** is set to **WPA2-EAP** or **WPA/WPA2-EAP**. To use the authentication method that requires a certificate, the necessary certificate needs to be issued from the authentication agency and be imported to FBR-100AN.

Settings on each authentication mode

The compatible settings on each authentication mode are as follows. For details, refer to **Appendix A-1. List of All Settings.**

Nama	IEEE802.1X Authentication Mode				
Name	EAP-TLS	EAP-TTLS	PEAP	EAP-FAST	LEAP
EAP User Name	Necessary	Necessary	Necessary	Necessary	Necessary
EAP Password	-	Necessary	Necessary	Necessary	Necessary
Inner Authentication Method	-	Necessary	Necessary	-	-
Client Certificate Password	Necessary	-	-	-	-
Client Certificate	Necessary	-	-	-	-
Server Authentication	Optional	Optional	Optional	-	-
CA Certificate	Optional	Optional	Optional	-	-
PAC Auto-distribution	-	-	-	Optional	-
PAC File	-	-	-	Optional	-

Name	Details	
EAP User Name	This is an ID and password that are used when the server identifies	
EAP Password	the client.	
Inner Authentication Method	Specify the authentication protocol to use. For PEAP, MSCHAPv2 is used.	
Client Certificate Password	Use this to check the client reliability. To retrieve a secret key from the	
Client Certificate	client certificate, a password is required.	
Server Authentication	Enable/Disable the reliability check of the server. When ON is selected, CA certificate is required to verify the server certificate.	
CA Certificate	This is a CA certificate to authenticate the server.	
PAC Auto-distribution	Enable/Disable the automatic PAC distribution. When OFF is selected, the PAC file is required that is generated by the server.	
PAC File	This is a file used for manual provisioning. The file is issued from the RADIUS server. When a password is set to the PAC file, it cannot be used.	

Certificate Standard

The following certificates are supported:

Certificate	ltem	Compatible standards
Client certificate	X509 certificate version	v3
	Public key algorithm	RSA
	Public key size	512bit, 1024bit, 2048bit
	Signature algorithm	SHA1/SHA2 (SHA-224, SHA-256, SHA-384, SHA-512) withRSA MD5withRSA
	X509v3 extended key usage	Client authentication (1.3.6.1.5.5.7.3.2)
CA certificate	Public key algorithm	RSA
	Public key size	512bit, 1024bit, 2048bit
	Signature algorithm	SHA1/SHA2 (SHA-224, SHA-256, SHA-384, SHA-512) withRSA MD5withRSA

Certificate Saving Format

The following saving formats are supported:

Certificate	Compatible standards
Client certificate	pfx * This is a format that includes a secret key of the certificate.
CA Certificate	PEM (A text format in which DER is BASE64 encoded.)

IEEE802.1X Connection Setting

When **Network Authentication** is **WPA2-EAP** or **WPA/WPA2-EAP**, it is possible to enable/disable a filter for the devices that are registered to the address management table.

When the filter is disabled, the communication data is bridged to wireless network even if the connected device is not registered to the address management table.

In that case, the device authentication feature of IEEE802.1X cannot be used.

3-5. Using AMC Manager® to Configure

The FBR-100AN settings can be configured using AMC Manager®. For details on how to use AMC Manager®, see the user's manual of AMC Manager®.



For details on each configuration item, refer to A-1. List of All Settings.

3-6. Installing and Using FBR-100AN

After the configuration is finished, install and fix FBR-100AN in the location of use. For use in wired LAN, connect FBR-100AN to the network using a network cable before turning on it. To fix FBR-100AN to the location of use, you can use either the mounting stays on the product case or the DIN rail mounting plate (commercially available).



- DIN rail and DIN rail mounting plate are not contained in the product package. They need to be purchased separately.
- Note Recommended DIN rail : TAKACHI DRA-1



This chapter explains the FBR-100AN functions.

4-1. Showing System Status

The system status shows the operating status of FBR-100AN.

1. Open your Web browser and access the FBR-100AN's Web page.



 For details on how to access the FBR-100AN's Web page using the Web browser, refer to 3-2-2. Displaying FBR-100AN's Web Page.

2. Click System from the configuration menu.



3. The System Status page is displayed.

System Status		
stem Status		
۰ <u>ــــــــــــــــــــــــــــــــــــ</u>		🌶 Refresh 🛛 📭 HEL
 System Status 		-
Name	Status	
Product Name	FBR-100AN	
Loader	HW01	
Version	1.2.0	
MAC Address	84:25:36:01:31:33	
Host Name	FBR-013133	
LAN Port1		
IP Address	192.168.1.1	
Subnet Mask	255.255.255.0	
LAN Port2		
IP Address	0.0.00	
Subnet Mask	0.0.00	
Defectly Octomer	0.000	

4-2. Showing Wireless LAN(STA) Status

Wireless LAN(STA) status shows the setting of wireless station.

- **1**. Open your Web browser and access the FBR-100AN's Web page.
 - For details on how to access the FBR-100AN's Web page using the Web browser, refer to 3-2-2. Displaying
 FBR-100AN's Web Page.
 - **Note** In the configuration menu, **Wireless LAN(STA)** under **Status** is not displayed when a wireless LAN interface is not enabled.
- 2. Click Wireless LAN(STA) from the configuration menu.

Select Language	
▼ Status	
– Wireless LAN(STA)	
▼ Network Conf.	
- General	
- Wireless LAN(STA)	
- FTP	
- Time	
V Revial Court	
 Senar Conf. General 	
Galaa	

3. The **Station Status** page is displayed.

I Station Status			
Station Status			
		🌶 Refresh 🛛 📭 HELF	
▶ Wireless LAN Information]		
 Wireless LAN Information 0000 Name 	Status		
Wireless LAN Information OOOO Name Current SSID	Status		
Wireless LAN Information Name Ourrent SSID Ourrent Channel	Status 1 ch.		
Wireless LAN Information OU	Status 1 ch.		

4-3. Showing MTConnect Status

MTConnect status shows the MTConnect setting.

1. Open your Web browser and access the FBR-100AN's Web page.



• For details on how to access the FBR-100AN's Web page using the Web browser, refer to **3-2-2. Displaying** FBR-100AN's Web Page.

2. Click MTConnect from the configuration menu.



3. The MTConnect Status page is displayed.

ATConnect Status		60
		🌶 Refresh 🛛 📭 H
MTConnect Status	Ohan a	
Norne	Status	
Parlas Marca (Marcina)	()	
Series Name (Version)	()	
CNC soft		
States	IR address of CNC is not set (71-1600)	
Link to MIConnect name		
Individual?		
Series Name (Version)	()	
PMC path		
CNC path		
Status	IP address of CNC is not set.	
Link to MTConnect page		
Individual3		
Series Name (Version)	()	
PMC path		
CNC path		
Status	IP address of CNC is not set.	
Link to MTConnect page		



- When the CNC device is connected, series name / PMC system number / CNC system number of that CNC device are displayed.
- When MTConnect Mode is set to agent & adapter or agent, a link to the MTConnect page is displayed. If the link is clicked, the MTConnect page will show up in a separate window at which you can easily check the collected data. For details, refer to "current" at List of HTTP Requests.
- To show the AirGRID[®] status, enable the AirGRID[®] link feature as described at 4-4-4. Collecting Information of Stack Tower Light Using AirGRID[®]. The WDR's connection status and WDT's MAC address will be displayed.
 The error code is displayed if an error occurs as a result of connection. Refer to A-2. List of Error Codes for
- details on how to handle it.

4-4. Using MTConnect

The following explains how to collect the CNC data.

4-4-1. What is MTConnect?

- MTConnect is the communication protocol for machine tools, which is standardized by the MTConnect Institution.
- MTConnect uses the open communication interfaces (HTTP/XML). It only supports reading the values from the operating monitor of machine tools and does not support writing the values.
- As FBR-100AN has the Agent and Adapter functions of the MTConnect server, CNC data can be collected by the following methods.
 - Use the MTConnect client compatible software.
 - Use the MTConnect Agent compatible software.
 - Connect to the CNC machine tool that has the MTConnect Adapter and then use the MTConnect client compatible software.



FBR-100AN does not include the MTConnect client software. Please purchase it separately (e.g. MTLINKi of FANUC, etc.). For evaluation of FBR-100AN, a free sample client software can be downloaded from our homepage.

Agent and Adapter

FBR-100AN has both MTConnect Agent and Adapter features and can receive the data in XML format or SHDR format (the format with vertical separation lines).

• Agent

Collects the data of Adapter.

FBR-100AN retrieves the data from Adapter and then replies in XLM format data, when it is accessed by the client software.

• Adapter

Collects the data of machine tools.

FBR-100AN replies with SHDR format data (the format with vertical separation lines), when it is accessed by the client software.





The operating information of maximum 3 CNC machine tools can be retrieved by FBR-100AN. When the maximum 3 CNC machine tools are used, a part of the reading function is restricted.

Data Collection Method

There are 5 methods of collecting the machine tool data.

Individual

The data of each point is individually collected based on the point file imported from the Web page of FBR-100AN.



• When the point file is not imported, the point file is automatically created.

Then, all default points are collected.

Collective(Network)

The data is collected at once based on the configured PCM information. The collected data is analyzed using the imported device information.

• To read the operating information at once using the start/end addresses specified on FBR-100AN, you may need to change the setting of CNC device in advance.

Collective(DPRNT)

DPRNT specification data is collected at once from a serial (RS-232C).

agent

Agent mode is on. The data is collected from the adapter.

AirGRID®

Only information of the stack tower light is collected using the wireless communication system AirGRID[®] developed by PATLITE Corporation.



WDT supports AirGRID[®] only when it is operating in the immediate transmission mode.

Glossary

Term	Description
Point file	This is the configuration file to specify the information of machine tools as a data point and transfer it by MTConnect.
Device information file	The device information file is used for collective data collection. It is a file to define the machine tool configuration as MTConnect and analyze the collected data.
Devices.xml file	Devices.xml is used for agent mode collection. It is a file to define the machine tool configuration as MTConnect.

4-4-2. MTConnect Setting

The following explains how to configure the MTConnect setting.

1. Open your Web browser and access the FBR-100AN's Web page.



For details on how to access the FBR-100AN's Web page using the Web browser, refer to 3-2-2. Displaying FBR-100AN's Web Page.

2. Click **MTConnect** from the configuration menu.



3. The **MTConnect Configuration** page is displayed. Configure each setting.

MIConnect Configuration					
ommon Configuration	Individual Configuration	on Collective Configuration	agent Mode Configuration	AirGRID® Configuration	
					📭 HELF
Common Confi	guration				
Name		Value			
MTConnect Mr	ode	agent & adapter V			
Data Acquisitio		1 G M G GB1 +			

To create a file to import, use a point file creation utility or device information creation utility.
4. Check the settings and click **Submit**.





The entered settings will be cleared if other configuration items are clicked on the menu.
 To save the entered settings, click **Submit**.

- **5.** Configure the settings appropriately for **Data Acquisition Mode** you have selected.
 - For individual collection Click **Individual Configuration**.
 - For collective collection (network) or collective collection (DPRNT) Click **Collective Configuration**.
 - For agent mode collection Click **agent Mode Configuration**.
 - For AirGRID[®] collection
 Click AirGRID[®] Configuration.



6. Configure each setting in the displayed page.

MTConnect Co	nfiguration			
mmon Configuration	Individual Configuration	Collective Configuration	agent Mode Configuration	AirGRID® Configuration
				📭 HELP
 Individual Config 	uration 1			
Name	Va	ilue		
MTConnect Part	(HTTP) 5	000		
MTConnect Port	(HTTPS) 5	143		
ONC ID	F	BR-013138-01		
CNC IP Address	0	0.0.0	Connection	
CNC Port	8	198		
CNC Connect T	imeout[s])		
CNC Connect In	iterva[ms]			

Individual Configuration

Collective Configuration

Configuration Individual Conf	guration Collective Configu	ration agent Mode Configuration	AirGRID® Configuration
Collective Configuration			
Name	Value		
MTConnect Part(HTTP)	5000		
MTConnect Part(HTTPS)	5443		
Collection Interva[ms]	100		
CNC ID Address	0.0.0.0	Connection	
CNO F. Modress			
ONC Port	8198		
ONC Port ONC Connect Timeout[s]	8198		
ONC Port ONC Connect Timeout[s] ONC Connect Interval[ms]	8198		

agent Mode Configuration

AirGRID® Configuration

MTConnect Configuration				MTConnect Config	uration		(
Common Configuration Individual Confi	guration Collective Configuration	agent Mode Configuration	AirGRID® Configuration	Common Configuration Individ	ual Configuration Collective Configu	ration agent Mode Con	figuration AirGRID® Configura	tion
–			्र					P
 agent Mode Configuration1 				 AirGRD® Configuration 	on for Single Operation			
Name	Value			Name	Value			
MTConnect Port(HTTP) MTConnect Port(HTTPS)	5000 5443			WDR IP Address	0.0.0.0	Connect	ion	
adapter IP Address	0.0.00	Connection			MAC Address Acquisition	MTConnect Port (HTTP)	MTConnect Part (HTTPS)	
adapter Port	7878			WDT1	000000000000000000000000000000000000000	5000	5443	
				WD T2	000000000000000000000000000000000000000	5001	5444	
Devices.xml	Brow	se import Delete		WDT3	000000000000000000000000000000000000000	5002	5445	
acent Mode Confin ration?				WDT4	000000000000000000000000000000000000000	5003	5446	
Name	Value			WD T5	000000000000000000000000000000000000000	5004	5447	

For details on each configuration item, refer to A-1. List of All Settings.

7. Check the settings and click Submit.





The entered settings will be cleared if other configuration items are clicked on the menu.

To save the entered settings, click **Submit**.

Ċ Note **8.** The confirmation message for restart is displayed.

To continue the configuration, click a link to the configuration.

Click **Restart** to take effect of the new setting when the necessary configuration is finished.





• Do not turn off FBR-100AN when the restart is in progress.



• FBR-100AN can also be restarted by clicking **Restart** from the configuration menu.

Note

9. When the restart is finished and the login page of FBR-100AN is displayed again, the configuration is completed.

4-4-3. Checking Collected Machine Tool Data

The collected CNC device data can be checked from the MTConnect Client tool or Web browser.

List of HTTP Requests

FBR-100AN supports the following HTTP requests.

Command	Description	Input Format
probe	Returns all device information of	Format:
	CNC device (1 device).	http://IP address:port number/probe
		/
		(Example)
		- Returns all device information.
		http://192.168.1.1:5000/probe
current	Requests for the latest values of	Format:
	CNC device.	http://IP address:port number/current
	The location information and	
	rotation speed can be retrieved.	(Example)
		- Returns the latest data.
		http://192.168.1.1:5000/current
		- Returns data of the specified sequence
		number
		http://192.168.1.1:5000/current?at=1232
sample	Requests for the history	Format:
	information by the specified	http://IP address:port number/sample
	sequence number of CNC device.	
	When the count is not specified,	(Example)
	the newest 100 history items are	- Returns the latest 100 history items.
	returned.	http://192.168.1.1:5000/sample
		- Beturns the history items with the
		sequence number 50-100.
		http://192.168.1.1:5000/
		sample?from=50&count=100

Command	Description	Input Format
asset	Requests for information of the	Format:
	asset connected separately from	http://IP address:port number/asset
	the CNC device (cutting device,	
	etc.).	(Example)
	'asset' supports the collective	- Returns all available assets.
	collection setting only.	http://192.168.1.1:5000/asset



• "(Double-quote) and space require URL encoding.

The details of the error are as follows.

Error Code	Description
NO_DEVICE	The device specified in the URI could not be found.
OUT_OF_RANGE	The sequence number was beyond the end of the buffer.
INVALID_XPATH	The XPath could not be parsed. Invalid syntax or XPath did not match any valid elements in the document.
UNSUPPORTED	A valid request was provided, but the Agent does not support the feature or request type.
ASSET_NOT_FOUND	An asset ID cannot be located.

Sample of MTConnect Client Utility

The sample of MTConnect client utility can be downloaded from the Silex Technology's homepage.

1. Access the website below on your PC.

https://www.silextechnology.com/

2. Go to the support page and download the sample of MTConnect client utility.

4-4-4. Collecting Information of Stack Tower Light Using AirGRID®

The information of stack tower light can be collected using the wireless communication system AirGRID[®] developed by PATLITE Corporation. The AirGRID[®] link function can be selected from the following configuration modes of FBR-100AN.

Integrated collection mode:

From the Web page of FBR-100AN, configure the data collection setting at **AirGRID**[®] **Migration Configuration** in the **Individual Configuration** page.

- Up to 3 machine tools and AirGRID® transmitters are supported.
- CNC device and stack tower light are displayed as machine tool information of one device.
- The upper system monitors two types of information for each machine.

Single collection mode:

From the Web page of FBR-100AN, select AirGRID® for Data Acquisition Mode.

- Up to 30 AirGRID® transmitters can be used.
- Only information of the stack tower light is collected and transferred.
- Old machines can be connected to the upper system that supports MTConnect.



FBR-100AN's Web Page.

Note • For details on each configuration item, refer to A-1. List of All Settings.

4-5. FTP Setting

The following explains how to configure the FTP setting.

1. Open your Web browser and access the FBR-100AN's Web page.



For details on how to access the FBR-100AN's Web page using the Web browser, refer to 3-2-2. Displaying FBR-100AN's Web Page.

2. Click **FTP** from the configuration menu.

Select Language	
English 🗸	
V Status	
- System - Wireless I AN(STA)	
- MIConnect	
init od inect	
▼ Network Conf.	
- General	
- Wireless LAN(STA)	
- Mil Connect	
-FIP	
nine	
▼ Serial Conf	
- General	
I	

3. The **FTP Configuration** page is displayed. Configure each setting.

EFTP Config	uration	650
FTP Configuration		
FTP Server	Configuration	BA HET D
Name	Value	
User name Password	admin	
FTP Status	stop 👂 Refresh Start FTP Stop FTP	
		Submit



• For details on each configuration item, refer to A-1. List of All Settings.

4. Clicking Start FTP starts the FTP server function, and clicking Stop FTP stops the FTP server function. The directory of the FTP server is as follows.

Directory	Description
FTP/emmc_ftp	After the files are written to the emmc_ftp directory, they are saved on emmc of FBR-100AN. Up to 1.2GByte data can be saved.
FTP/ram_ftp	After the files are written to the ram_ftp directory, they are saved on the RAM of FBR-100AN. The files are deleted when FBR-100AN is turned off or restarted. Up to 120 MByte data can be saved.



It is impossible to write the files directly to the FTP directory.

5. Check the settings and click Submit.





• The entered settings will be cleared if other configuration items are clicked on the menu. To save the entered settings, click Submit.

4-6. Time Setting

If the time setting is configured, FBR-100AN synchronizes with the NTP server to get the time information when it is turned on. It is also possible to configure the time setting manually.

1. Open your Web browser and access the FBR-100AN's Web page.



 For details on how to access the FBR-100AN's Web page using the Web browser, refer to 3-2-2. Displaying FBR-100AN's Web Page.

2. Click **Time** from the configuration menu.



3. The **Time Configuration** page is displayed. Configure each setting.

Configuration		
		E y H
• Date		
Name		
Current Local Time (YYYY/MM/DD hhmmiss)	1970/01/01 09:31 57 (GMT +0900)	
Timezone Configuration		
Name	Value	
Time Zane	+9):00)	
 Date and Time Configuration Name 	Value	
NTD E wetter		
NTP Function	DISABLE V	
Manual Castin matim		
(VVVVAMM/DD bbmm)		



4. Check the settings and click Submit.





To save the entered settings, click **Submit**.

Note • The new setting will take effect when FBR-100AN is turned on next time.

5. The confirmation message for restart is displayed.

To continue the configuration, click the setting item you want to configure from the menu. Click **Restart** to take effect of the new setting when the necessary configuration is finished.



6. When the restart is finished and the login page of FBR-100AN is displayed again, the configuration is completed.

4-7. Serial Setting

The serial communication setting can be configured.

1. Open your Web browser and access the FBR-100AN's Web page.



 For details on how to access the FBR-100AN's Web page using the Web browser, refer to 3-2-2. Displaying FBR-100AN's Web Page.

2. Click General from the configuration menu.



3. The **General Configuration** page is displayed. Configure each setting.

General Configuration	
General Configuration	
	eran <mark>e</mark> l
General Configuration Name	Value
Baul Rate(baud) Bits per Character[bit] Stop bit[bit] Parity Flow Control	#200 ▼ 8 ▼ 2 ▼ None ▼ None ▼
	Submit



• For details on each configuration item, refer to A-1. List of All Settings.

4. Check the settings and click **Submit**.



- The entered settings will be cleared if other configuration items are clicked on the menu.
 To save the entered settings, click **Submit**.
- **Note** The new setting will take effect when FBR-100AN is turned on next time.
- 5. The confirmation message for restart is displayed.

To continue the configuration, click the setting item you want to configure from the menu. Click **Restart** to take effect of the new setting when the necessary configuration is finished.

	Setting is completed. Take effect of this setting, please restart.
TIP	• Do not turn off FBR-100AN when the restart is in progress.
P Note	• FBR-100AN can also be restarted by clicking Restart from the configuration menu.

6. When the restart is finished and the login page of FBR-100AN is displayed again, the configuration is completed.

4-8. Login Password Change

The following explains how to change the login password.

1. Open your Web browser and access the FBR-100AN's Web page.



 For details on how to access the FBR-100AN's Web page using the Web browser, refer to 3-2-2. Displaying FBR-100AN's Web Page.

2. Click Login Password from the configuration menu.



3. The Login Password Configuration page is displayed. Configure the new password.





• For details on each configuration item, refer to A-1. List of All Settings.

80

4. Check the settings and click **Submit**.



- The entered settings will be cleared if other configuration items are clicked on the menu.
 - To save the entered settings, click **Submit**.
- **Note** The new setting will take effect when FBR-100AN is turned on next time.
- 5. The confirmation message for restart is displayed.

To continue the configuration, click the setting item you want to configure from the menu. Click **Restart** to take effect of the new setting when the necessary configuration is finished.

To	Setting is completed. take effect of this setting, please restart. Restart
	• Do not turn off FBR-100AN when the restart is in progress.
	• FBR-100AN can also be restarted by clicking Restart from the configuration menu.

6. When the restart is finished and the login page of FBR-100AN is displayed again, the configuration is completed.

4-9. IP Address Filter

By registering the IP address filter, access to FBR-100AN from the specified device can be restricted.

Up to 20 addresses can be registered. For each range of IP address, you can set "ALLOW" to allow access from or "DENY" to deny access from.



- If this function is used, the communication speed may slow down as the network communication is monitored.
- It is possible to use this function for both wired LAN and wireless LAN.
- Access to the bridged device is not filtered.
- **1.** Open your Web browser and access the FBR-100AN's Web page.



For details on how to access the FBR-100AN's Web page using the Web browser, refer to 3-2-2. Displaying FBR-100AN's Web Page.

2. Click IP Address Filter from the configuration menu.



3. The **IP Address Filter Configuration** page is displayed.

P Address Filter Configuration				
dress Filter Configuration				
 Default Filter Mode 				
Name	Value			
Default Filter Mode	ALLOW V			
New Conditions				
Name	Value			
Filter Mode Starting Address Ending Address	DENY 0000 0000 Add			
 Registered Condition Manager 	nent			
Name	Value			
Registered Conditions	Filter: Start Address - End Address			

Default Filter Mode

Configure the access control setting for all IP addresses (**ALLOW/DENY**). When **Default Filter Mode** is set to **ALLOW**, access is allowed from all IP addresses. When it is set to **DENY**, access from all IP addresses is denied.

Default Filter Mode is used with Filter Mode.

If **Default Filter Mode** is set to **DENY**, FBR-100AN can be accessed only from the devices whose address range is set to **ALLOW** at **Filter Mode**.

Adding Filter Conditions

Select the filter mode at **Filter Mode**, enter the address to **Starting Address** and **Ending Address** to specify the address range, and click **Add**.

Once the filter conditions are registered, it is displayed at **Registered Conditions**.



If Default Filter Mode is set to DENY and no IP address is registered, this setting is invalidated and access
from all IP addresses is allowed.

Note • For details on each configuration item, refer to A-1. List of All Settings.

Deleting Filter Conditions

Select the condition to remove from **Registered Conditions** and click **Delete**.

Changing Priority of Conditions to Use

Select the condition to change the priority and click [1] button or [1] button to make the priority of that condition higher or lower.

4. Check the settings and click Submit.





The entered settings will be cleared if other configuration items are clicked on the menu.

To save the entered settings, click **Submit**.

Note • The new setting will take effect when FBR-100AN is turned on next time.

5. The confirmation message for restart is displayed.

To continue the configuration, click the setting item you want to configure from the menu. Click Restart to take effect of the new setting when the necessary configuration is finished.



6. When the restart is finished and the login page of FBR-100AN is displayed again, the configuration is completed.



If the IP address or network operation mode is changed on FBR-100AN and which does now allow communication from the PC, the login page is not displayed.

Note

4-10. MAC Address Filter

By registering the MAC Address filter, access to FBR-100AN from the specified device can be restricted. Up to 20 addresses can be registered. For each range of MAC address, you can set "ALLOW" to allow access from or "DENY" to deny access from.



- If this function is used, the communication speed may slow down as the network communication is monitored.
- It is possible to use this function for both wired LAN and wireless LAN.
- Access to the bridged device is not filtered.
- **1.** Open your Web browser and access the FBR-100AN's Web page.



For details on how to access the FBR-100AN's Web page using the Web browser, refer to 3-2-2. Displaying FBR-100AN's Web Page.

2. Click MAC Address Filter from the configuration menu.



3. The MAC Address Filter Configuration page is displayed.





• For details on each configuration item, refer to A-1. List of All Settings.

4. Check the settings and click Submit.



- The entered settings will be cleared if other configuration items are clicked on the menu. To save the entered settings, click **Submit**.
- **Note** The new setting will take effect when FBR-100AN is turned on next time.
- 5. The confirmation message for restart is displayed.

To continue the configuration, click the setting item you want to configure from the menu. Click **Restart** to take effect of the new setting when the necessary configuration is finished.

	Setting is completed. take effect of this setting, please restart. Restart
TIP	• Do not turn off FBR-100AN when the restart is in progress.
P Note	• FBR-100AN can also be restarted by clicking Restart from the configuration menu.

6. When the restart is finished and the login page of FBR-100AN is displayed again, the configuration is completed.



• If the IP address or network operation mode is changed on FBR-100AN and which does now allow communication from the PC, the login page is not displayed.

4-11. Log Output

The following explains how to output the system log from the Web page.

1. Open your Web browser and access the FBR-100AN's Web page.



 For details on how to access the FBR-100AN's Web page using the Web browser, refer to 3-2-2. Displaying FBR-100AN's Web Page.

2. Click Log Output from the configuration menu.



3. The **Log Output** page is displayed. Click **Save**.

Log Output		
System Log		
	∎ p ⊢	ELP
Are you sure to save system log?		
	Save	

4. Follow the instruction on the dialog to save the log.



4-12. Packet Capture

The following explains how to capture the network packets using the Web page.

1. Open your Web browser and access the FBR-100AN's Web page.



 For details on how to access the FBR-100AN's Web page using the Web browser, refer to 3-2-2. Displaying FBR-100AN's Web Page.

2. Click Packet Capture from the configuration menu.



3. The **Packet Capture** page is displayed. Click **Capture Start** or **Capture Stop**.



Clicking **Capture Start** will start the packet capture. Clicking **Capture Stop** will stop the packet capture. 4. Click Save to save the captured packets (packet_archive.zip).

Packet Capture		65
Packet Capture		
		Ce HELP
Packet Capture	Capture Start Cooltare Stop	

The captured data is saved with a file name according to the following rules.
Interface Name>-<Date>_<Time>.cap<Rotate Count>

Example) Interface Name : eth0, Date : 2019/01/01, Time : 12:30:00, Rotate Count : 0

eth0-20190101_123000.cap0



- If the file size exceeds 10MB, it is rotated to another file.
- The maximum number of rotations is 10. When the network operation mode is Edge, and the wireless interface is enabled on 3 interfaces (eth0, eth1, ath0), the maximum 300MB data (10MB x 30) can be saved.
- If a free space of eMMC is 600MB or less, the packet capture does not function since it is also used to save the compressed files.

(blank page)

5. Maintenance Feature

This chapter explains the maintenance feature of FBR-100AN.

- Factory Default Configuration
- Restart
- Firmware Update

5-1. Factory Default Configuration

The following explains how to reset FBR-100AN to the factory default setting.



- Once the factory default configuration is executed, all settings of FBR-100AN are reset to the default ones. It is highly recommended to take a note of the current setting. Remember that not only the product settings but also files and programs of emmc will be initialized.
- Before starting the factory default configuration, make sure that no PCs are accessing FBR-100AN.
- Do not turn off FBR-100AN when the initialization is in progress.
- Even if the initialization is done, the activation key will remain. To clear the activation key, refer to **A-3-2**. **Clearing Activation Key**.

5-1-1. Factory Default Configuration Using Web Page

The following explains how to execute the factory default configuration using the Web page.

1. Open your Web browser and access the FBR-100AN's Web page.



• For details on how to access the FBR-100AN's Web page using the Web browser, refer to **3-2-2. Displaying FBR-100AN's Web Page**.

2. Click Setting Initialization from the configuration menu.



3. The **Setting Initialization** page is displayed.

Select **All** or **Setting Excluding LAN Setting** for **Select the target device to initialize** and click **Execute**.



Initialization target	Function		
All	Initializes all settings.		
Setting Excluding LAN Setting	Initializes the general network setting and wireless LAN (STA) setting.		

4. Click **OK** to the confirmation message.



5. The factory default configuration starts. When it is finished, FBR-100AN will automatically be restarted.



• Do not turn off FBR-100AN when the initialization or restart is in progress.

6. When the restart is finished and the login password configuration page of FBR-100AN is displayed again, the initialization is completed.



TIP

• As the IP address of FBR-100AN is reset to the default one (192.168.1.1), the login page may not be displayed. To access the login page again, the network setting of the PC needs to be changed.

5-1-2. Factory Default Configuration Using Push Switch

The following explains how to execute the factory default configuration using the push switch.

- **1**. Turn off FBR-100AN by unplugging the DC cable or AC adapter.
- **2.** Press and hold the push switch on the front side of FBR-100AN while plugging the DC cable or AC adapter back into FBR-100AN. Keep pressing.
- **3.** When all LEDs on top side of FBR-100AN turn orange, and then all LEDs except for PWR LED turn off, release the push switch.
- **4.** When the PWR LED turns green, the factory default configuration is completed.

5-2. Restart

The following explains how to restart FBR-100AN.

5-2-1. Restart by Unplugging Cables

- **1.** Turn off FBR-100AN by unplugging the DC cable or AC adapter.
- **2.** Plug the DC cable or AC adapter back into FBR-100AN. Check that the PWR LED turns green on top of FBR-100AN.
- **3.** When all LEDs except for the PWR LED turn on, restart is completed. (The LED light pattern will differ depending on the configuration or link status of FBR-100AN.)

5-2-2. Restart Using Web Page

The following explains how to restart FBR-100AN using the Web page.

How to Restart FBR-100AN Using Web Page

1 Open your Web browser and access the FBR-100AN's Web page.



• For details on how to access the FBR-100AN's Web page using the Web browser, refer to **3-2-2. Displaying FBR-100AN's Web Page**.

2. Click **Restart** from the configuration menu.



3. The **Restart** page is displayed. Click **Yes**.





• Do not turn off FBR-100AN when the restart is in progress.

4. When the restart is finished, the login page of FBR-100AN is displayed.

If the IP address or network operation mode is changed on FBR-100AN and which does now allow

Enter the password, and click (Loein).
Password
Losin
Select Language
English

communication from the PC, the login page is not displayed.



•

97

5-3. Firmware Update

The firmware of FBR-100AN can be upgraded via network.

5-3-1. Downloading Latest Firmware

Download the latest firmware file from the Silex Technology's website.



1. Access the website below on PC.

https://www.silextechnology.com/

2. Go to the support page, download the firmware file and extract it on the desktop.

5-3-2. How to Update Firmware

The following explains how to update the FBR-100AN's firmware using the Web page.

1. Open your Web browser and access the FBR-100AN's Web page.



- For details on how to access the FBR-100AN's Web page using the Web browser, refer to 3-2-2. Displaying FBR-100AN's Web Page.
- **2.** Click **Firmware Update** from the configuration menu.



3. The **Firmware Update** page is displayed. Click the **Browse** button.



4. In the file selection window, select the firmware update file (FBR-100AN.bin) that you have downloaded from the website and click **Open**.

Open						×
$\leftarrow \rightarrow \cdot \uparrow$	■ > PC > D	esktop	ٽ ~	Search		<i>م</i>
Organize 🔻	New folder				-	•
Quick acce ConeDrive This PC Network	:ss FE	3R-100AN.bin				
🖸 Camera						
Photos						
	File <u>n</u> ame:	FBR-100AN.bin		All files (*)		~
				<u>O</u> pen		ancel

5. Check that the file name is displayed at New firmware field and click Update .



6. Click OK to the confirmation message.



7. The firmware update starts.

When the update is finished, FBR-100AN will automatically be restarted.





Do not turn off FBR-100AN or close your Web browser while the firmware update is in process. Do not turn off FBR-100AN when the restart is in progress.

8. When the restart is finished and the login page is displayed, firmware update is completed. Check that the new firmware version is displayed at the bottom left of Web page.

(blank page)


This chapter explains each configuration item available on FBR-100AN.

A-1. List of All Settings

The FBR-100AN has the following configuration items:

A-1-1. Network Configuration

General - General Configuration

Device Configuration

Name	Host Name
Details	Set the host name. Be sure to use a unique name that is not used by other devices.
Range	1-16 character string
Default Value	"FBR-xxxxxx" (xxxxxx is a last 6-digit of the MAC Address)
Name	Wireless Interface
Details	Select whether to use the wireless interface.
Range	DISABLE ENABLE
Default Value	DISABLE

Name	Network operation mode
Details	Set the operating mode of FBR-100AN. - Edge IP address/subnet mask are assigned for each interface.
	- Bridge The specified interfaces are integrated into one, and IP address/subnet mask are assigned to it. For the unspecified interfaces, different IP address/ subnet mask are assigned.
Range	Edge Bridge
Default Value	Edge
Name	Default Gateway
Details	Set the default gateway address. If "0.0.0.0" is set, this setting is disabled. When the configured address is not found on the network segment of each interface, the value obtained from DHCP is applied.
Range	0.0.0.0 - 255.255.255.255
Default Value	0.0.0.0
Name	Link Speed Port 1 / 2
Details	Set a link speed for wired LAN port.
Range	AUTO 10 BASE-T-Half 10 BASE-T-Full 100 BASE-TX-Half 100 BASE-TX-Full 1000 BASE-T-Full
Default Value	AUTO

Name Resolution Protocol Configuration

Name	DNS Suffix
Details	Set the DNS suffix.
Range	0-255 character string (letters, numbers, period, hyphen)
Default Value	(None)
Name	DNS Server (Primary)
Details	Set a primary DNS server address. When DHCP client is enabled, the DNS server address obtained from DHCP server will be applied.
Range	0.0.0.0 - 255.255.255.255
Default Value	0.0.0
Name	DNS Server (Secondary)
Details	Set a secondary DNS server address. When DHCP client is enabled, the DNS server address obtained from DHCP server will be applied.
Range	0.0.0.0 - 255.255.255.255
Default Value	0.0.0.0

LAN Port1 / LAN Port2 / WLAN Port / Bridge Port

Name	Add to Bridge
	When the network operation mode is Bridge , the bridge port setting is displayed. Set the interface to add to the bridge.
Details	All : LAN1, LAN2, WLAN are automatically selected. Wired Only : LAN1, LAN2 are automatically selected. Custom : LAN1, LAN2, WLAN can manually be selected.
Range	All / Wired Only / Custom
Default Value	Wired Only
Name	DHCP Client
Details	Select whether to use the DHCP client function.
Range	DISABLE ENABLE
Default Value	DISABLE (LAN Port1, LAN Port2, Bridge Port) ENABLE (WLAN Port)
Name	IP Address
Details	Set an IP address.
Range	0.0.0.0 - 255.255.255.255
Default Value	192.168.1.1 (LAN Port1) 192.168.2.1 (LAN Port2) 0.0.0.0 (WLAN Port) 192.168.3.1 (Bridge Port)
Name	Subnet Mask
Details	Set a subnet mask.
Range	0.0.0.0 - 255.255.255.255
Default Value	255.255.255.0 (LAN Port1, LAN Port2, Bridge Port) 0.0.0.0 (WLAN Port)

General - Bridge Detailed Configuration

Address Management Table Configuration

Configure this setting when it is not possible to communicate with the device that is connected to a wired LAN port of FBR-100AN.

Name	MAC Address
Details	Enter the MAC Address of the device to be connected to a wired LAN port.
Range	00:00:00:00:01 - FE:FF:FF:FF:FF
Default Value	00:00:00:00:00
Name	DHCP Client
Details	Select whether to enable/disable the DHCP client for the device to be connected to a wired LAN port.
Range	DISABLE ENABLE
Default Value	DISABLE
Name	IP Address
Details	Configure the IP address of the device to be connected to a wired LAN port. This setting can be configured when the DHCP client is set to DISABLE . When it is set to ENABLE , the IP address will be "0.0.0.0".
Range	0.0.0.0 - 255.255.255
Default Value	0.0.0.0
Name	Management Table (for IPv4)
Details	This shows the registered MAC address, IP address (IPv4) and DHCP client information of the device to be connected to a wired LAN port (up to 16 addresses). Add : Adds the MAC address, IP address (IPv4) and DHCP client information to the table. Delete : Removes the selected information from the table
Bange	
Default Value	

Wireless LAN (STA) - Easy Configuration

Name	SSID
Details	Access Points are searched and shown on the SSID list. Select the SSID of the Access Point you want to connect.
Range	-
Default Value	-
Name	Network Key
Details	Enter the network key to connect the wireless devices. The authentication method will differ depending on the selected Access Point.
Range	When Shared is used: - 5-digit or 13-digit character string - 10-digit or 26-digit hexadecimal number When WPA or WPA2 is used: - A string with 8-64 ASCII characters including symbols
Default Value	(None)

Wireless LAN (STA) - Detailed Configuration

Wireless LAN Basic Configuration

Name	SSID
Details	Set an SSID for wireless LAN of FBR-100AN. SSID is an ID to distinguish one network group from the others in wireless LAN. The devices must share the same SSID to communicate with each other in wireless LAN.
Range	A string with 1-32 ASCII characters including symbols
Default Value	"SSID"
Name	Network Authentication
Details	Select the network authentication mode.
Range	Open Shared WPA2-PSK WPA/WPA2-PSK WPA2-EAP WPA/WPA2-EAP
Default Value	Open
Name	Encryption Mode
Details	Select the encryption mode.
Range	AUTO / AES
Default Value	When WPA2-PSK or WPA2-EAP is used : AES When WPA/WPA2-PSK or WPA/WPA2-EAP is used : AUTO

WEP Configuration

WEP
Enable/Disable the WEP encryption when the network authentication method is set to Open or Shared . If the WEP encryption is used, wireless communication will be encrypted using the settings of WEP Key 1-4 and Key Index .
OFF / ON
OFF
Key Index
Select the number of the WEP key to use for encryption (1-4). This setting must be the same as that of your wireless device.
1/2/3/4
1
WEP Key1 - 4
Set the WEP key for WEP encryption. Up to 4 WEP keys can be set. This setting must be the same as that of your wireless devices. A WEP key must be entered using hexadecimal or alphanumeric characters.
5 or 13 characters 10 or 26 digit hexadecimal value
(None)

WPA/WPA2 PSK Configuration

Name	Pre-Shared Key
Details	Set the Pre-Shared Key for the TKIP/AES encryption. The Pre-Shared Key is a keyword used to create the encryption key. It is also referred to as ' network key ' or ' password '.
Range	A string with 8-64 ASCII characters including symbols
Default Value	"PreSharedKey"

WPA/WPA2 EAP Configuration

Name	Authentication Method
Details	Set the authentication method to use for IEEE 802.1X authentication.
Range	EAP-TLS EAP-TTLS PEAP EAP-FAST LEAP
Default Value	EAP-TLS
Name	EAP User Name
Details	Set an EAP user name for the IEEE 802.1X authentication. This name is used by the server to identify a client.
Range	A string with 0-64 ASCII characters including symbols
Default Value	(None)
Name	EAP Password
Details	Set an EAP password for the IEEE 802.1X authentication. It is used to check the reliability of the client when the authentication method other than EAP-TLS is set.
Range	A string with 0-32 ASCII characters including symbols
Default Value	(None)
Name	Inner Authentication Method
Details	Set a method for inner authentication (PAP/CHAP/MSCHAP/MSCHAPv2) to run within TLS tunneling of the IEEE 802.1X authentication. This setting is displayed when the authentication method is set to EAP-TTLS or PEAP, and is fixed to MSCHAPv2 when PEAP is used.
Range	PAP CHAP MSCHAP MSCHAPv2
Default Value	PAP
Name	Client Certificate Password
Details	Set a client certificate password to use for client authentication of IEEE 802.1X authentication. This setting is necessary when a password is set to the client certificate. This is used when EAP-TLS is used as authentication method.
Range	A string with 0-32 ASCII characters including symbols
Default Value	(None)

Name	Client Certification
Details	Select a client certificate to use for client authentication of IEEE 802.1X authentication. This is used when EAP-TLS is used as authentication method.
Range	Upload the client certificate.
Default Value	-
Name	Server Authentication
Details	Set whether to verify that the server certificate is issued from a trusted root certification authority when EAP-TLS, EAP-TTLS or PEAP authentication mode is used. When this setting is enabled, CA certificate is required since verification of the server certificate runs.
Range	OFF / ON
Default Value	OFF
Name	CA Certification
Details	Select a CA certificate to use for server authentication. This setting is displayed when the server authentication is enabled.
Range	Upload the CA certificate.
Default Value	-
Name	Auto PAC Provisioning
Details	Enable/Disable automatic distribution of PAC file. When this setting is disabled, the PAC file issued from the server is required. This setting is displayed when the authentication method is set to EAP-FAST.
Range	OFF / ON
Default Value	OFF
Name	PAC File Distribution
Details	Register the PAC file issued from the server to use for manual distribution of PAC (Protected Access Credential) when using EAP-FAST authentication. This setting is displayed when the authentication method is set to EAP-FAST.
Range	Upload the PAC file.
Default Value	-

Certificate Registration Status

When **WPA2-EAP** or **WPA/WPA2-EAP** is selected for network authentication, the registration status of following certificates is displayed.

Name	Client Certification
Details	This is a certificate file to authenticate FBR-100AN for IEEE802.1X authentication.
Range	The certificate registration status is displayed. Not Registered Registered
Default Value	Not Registered
Name	CA Certification
Details	This is a CA certificate file to authenticate a certificate sent from the RADIUS server when IEEE802.1X authentication is used.
Range	The certificate registration status is displayed. Not Registered Registered
Default Value	Not Registered
Name	PAC File Distribution
Details	Register the PAC file issued from the server to use for manual distribution of PAC (Protected Access Credential) when using EAP-FAST authentication.
Range	The certificate registration status is displayed. Not Registered Registered
Default Value	Not Registered

IEEE802.1X Network Device Configuration

Name	Device Filter
Details	Enable/Disable a filter for the devices registered to the address management table.
	When this setting is disabled, data is bridged to wireless network even if the connected devices are not registered to the address management table of the bridge detailed setting. The security feature of IEEE802.1X device authentication will not be available then.
Range	OFF (Disable) / ON (Enable)
Default Value	ON

MTConnect Configuration - Common Configuration

Common Configuration

Name	MTConnect Mode
	Set the MTConnect operating mode.
Details	 - agent & adapter When accessed from the client, FBR-100AN replies in XML format data. - adapter When accessed from the client, FBR-100AN replies in SHDR format data (format with vertical separation lines ' '). - agent When accessed from the client, FBR-100AN replies in XML format data. From the adapter, SHDR format data (format with vertical separation lines ' ') is collected.
Range	agent & adapter adapter agent
Default Value	agent & adapter
Name	Data Acquisition Mode
Details	 Set the MTConnect data collection mode. Individual Based on the imported point-file, FBR-100AN collects the data of each point individually. Collective(Network) The data is collected at once using the configured PMC information. The collected data is analyzed based on the imported device information. Collective(DPRNT) The DPRNT specification data is collected at once after it is sent from serial (RS-232C). agent Agent mode is on. The data is collected from the adapter. AirGRID® Only information of the stack tower light can be collected using the wireless communication system AirGRID® developed by PATLITE Corporation. Up to 30 AirGRID® transmitters can be used.
Range	Individual Collective(Network) Collective(DPRNT) agent AirGRID®
Default Value	Individual

MTConnect Configuration - Individual Configuration

Individual Configuration1 - 3

Up to 3 CNC devices can be specified for **Individual Configuration**. When multiple CNC devices are connected, the number of collectable data is limited. For details, refer to the description on the point file generation utility.



To create a point file to import, use a point file creation utility.

Name	MTConnect Port(HTTP)
Details	Set the port number to be used for MTConnect (HTTP) communication.
Range	0 - 32767
Default Value	5000 - 5002 (when MTConnect Mode is agent & adapter) 7878 - 7880 (when MTConnect Mode is adapter)
Name	MTConnect Port(HTTPS)
Details	Set the port number to be used for MTConnect (HTTPS) communication.
Range	0 - 32767
Default Value	5443 - 5445 (when MTConnect mode is agent & adapter) 7443 - 7445 (when MTConnect mode is adapter)
Name	CNC ID
Details	Set the ID to identify CNC. For the Device Name to be registered on MTConnect client software, use this name. (This is set to 'Device name' on XML.)
Range	1-32 characters, numbers and hyphens (-)
Default Value	FBR-xxxxx-01 to 03 (xxxxxx is a lower 6 byte of the MAC Address)
Name	CNC IP Address
Details	Set the IP address of CNC to be connected.
Range	0.0.0.0 - 255.255.255.255
Default Value	0.0.0.0
Name	CNC Port
Details	Set the port number of CNC to be connected.
Range	0 - 65535
Default Value	8193

Name	CNC Connect Timeout[s]
Details	Set the CNC communication timeout (seconds).
Range	0 - 100
Default Value	10
Name	CNC Connect Interval[ms]
Details	Set the CNC communication interval (milliseconds). It is recommended to set a value of 100ms or more.
Range	0 - 1000
Default Value	0
Name	Point file
	Import or delete the point setting file that is created using a point file creation utility.
Details	Browse : Specifies the point file to import
	Import: Imports the specified point file
	Delete : Deletes the imported point file.
Range	-
Default Value	-

Name	AirGRID® Migration
Details	Enable/disable the AirGRID [®] integrated collection function. The information of CNC and stack tower light can be collected and merged using AirGRID [®] of PATLITE Corporation.
Range	ENABLE / DISABLE
Default Value	DISABLE
Name	WDR IP Address
Details	Set the IP address of the AirGRID [®] WDR receiver.
Range	0.0.0.0 - 255.255.255.255
Default Value	0.0.0
Name	WDT MAC Address (for Individual Configuration 1-3)
Details	Set the MAC address of the AirGRID® WDT transmitter to monitor. (The same value cannot be used twice.)
Range	16 alphanumeric characters
Default Value	0000000000000
	÷

MTConnect Configuration - Collective Configuration

Collective Configuration

Only one CNC device can be specified for **Collective Configuration**.



To create a device information file to import, use a device information creation utility.

Name	MTConnect Port(HTTP)
Details	Set the port number to be used for MTConnect (HTTP) communication.
	This setting is used even when Collective (DPRNT) is selected for the data acquisition mode.
Range	0 - 32767
Default Value	5000 (when MTConnect mode is agent & adapter) 7878 (when MTConnect mode is adapter)
Name	MTConnect Port(HTTPS)
	Set the port number to be used for MTConnect (HTTPS) communication.
Details	This setting is used even when Collective (DPRNT) is selected for the data acquisition mode.
Range	0 - 32767
Default Value	5443 (when MTConnect mode is agent & adapter) 7443 (MTConnect mode is adapter)
Name	Collection Interval[ms]
Details	Set the data collection interval (milliseconds).
	This setting is used even when Collective (DPRNT) is selected for the data acquisition mode.
Range	30 - 1800000
Default Value	100
Name	CNC IP Address
Details	Set the IP address of CNC to be connected.
Range	0.0.0.0 - 255.255.255.255
Default Value	0.0.00

Name	CNC Port
Details	Set the port number of CNC to be connected.
Range	0 - 65535
Default Value	8193
Name	CNC Connect Timeout[s]
Details	Set the CNC communication timeout (seconds).
Range	0 - 100
Default Value	10
Name	CNC Connect Interval[ms]
Details	Set the CNC communication interval (milliseconds). It is recommended to set a value of 100ms or more.
Range	0 - 1000
Default Value	0
Name	PMC Address Type
Details	Set the type of PMC address. This must be the same address type as PMC.
Range	0 - 32767
Default Value	5
Name	PMC Data Type
Details	Set the type of PMC data. This must be the same data type as PMC.
Range	0 - 32767
Default Value	0
Name	PMC Start Number
Details	Set the PMC address number to start reading from.
Range	0 - 65536
Default Value	12000
Name	PMC End Number
Details	Set the PMC address number to finish reading at.
Range	0 - 65536
Default Value	12999

Name	Collection counter gap
Details	Set how much gap is acceptable when data is collected.
Range	0 - 100
Default Value	1
Name	Devices info
Details	Import or delete the device information file that is created using a device information creation utility.
	Browse : Specifies the device information file to import or delete. Import : Imports the specified device information file. Delete : Deletes the imported device information file.
Range	-
Default Value	-

MTConnect Configuration - agent Mode Configuration

agent Mode Configuration1 - 3

Up to 3 adapter devices can be specified for **agent Mode Configuration**. When multiple adapter devices are connected, the number of collectable data is limited. For details, refer to the description on the point file generation utility.

Name	MTConnect Port(HTTP)
Details	Set the port number to be used for MTConnect (HTTP) communication.
Range	0 - 32767
Default Value	5000 - 5002
Name	MTConnect Port(HTTPS)
Details	Set the port number to be used for MTConnect (HTTPS) communication.
Range	0 - 32767
Default Value	5443 - 5445
Name	adapter IP Address
Details	Set the IP address of adapter to be connected.
Range	0.0.0.0 - 255.255.255.255
Default Value	0.0.0.0
Name	adapter Port
Details	Set the port number of adapter to be connected.
Range	0 - 65535
Default Value	7878 - 7880
Name	Devices.xml
	Import or delete the device file (Devices.xml).
Details	Browse : Specifies the device file to import or delete. Import : Imports the specified device file. Delete : Deletes the imported device file.
Range	-
Default Value	-

MTConnect Configuration - AirGRID® Configuration

AirGRID® Configuration for Single Operation

Up to 30 AirGRID[®] transmitters can be used. Only information of the stack tower light is collected, and converted to MTConnect and then the upper system is connected.

Name	WDR IP Address
Details	Set the IP address of the AirGRID [®] WDR receiver.
Range	0.0.0-255.255.255.255
Default Value	0.0.0.0
Name	MAC Address
Details	Set the MAC address of the AirGRID [®] WDT transmitter to monitor. (The same value cannot be used twice.)
	Clicking [Acquisition] will acquire the MAC address of the WDT being connected to the WDR, and then will reflect it in the input form. This is valid only when all WDT MAC addresses are defaults.
Range	16 alphanumeric characters
Default Value	0000000000000
Name	MTConnect Port (HTTP)
Details	Set the port number for MTConnect(HTTP) communication.
Range	0-32767
Default Value	5000 - 5029 (when MTConnect mode is agent & adapter) 7878 - 7907 (when MTConnect mode is adapter)
Name	MTConnect Port (HTTPS)
Details	Set the port number for MTConnect(HTTPS) communication.
Range	0-32767
Default Value	5443 - 5472 (when MTConnect mode is agent & adapter) 7443 - 7472 (when MTConnect mode is adapter)

FTP Configuration

FTP Server Configuration

Name	User name
Details	Set the user name to access FTP.
Range	Acceptable characters are 0 to 9, a to z, A to Z, and - (hyphen). The hyphen cannot be used at the beginning and end of the string. Up to 32 characters can be used. It is impossible to use phrases already used in the system. Example) root, nobody, deamon, bin, sys, sync, proxy, sshd, default
Default Value	admin
Name	Password
Details	Set the password to access FTP.
Range	Acceptable characters are 0 to 9, a to z, A to Z, and - (hyphen). The hyphen cannot be used at the beginning and end of the string. Up to 32 characters can be used.
Default Value	admin
Name	FTP Status
Details	Start/Stop FTP.
Range	start / stop Start FTP : Starts the FTP function Stop FTP : Finish the FTP function
Default Value	stop

Time Configuration

Date

The current time is displayed.

Timezone Configuration

Time Zone
Set the time zone.
Hour : -13 to +14 Minute : 00 /15 / 30 / 45
+9:00

Date and Time Configuration

Name	NTP Function
Details	Enable/Disable the NTP protocol.
Range	ENABLE DISABLE
Default Value	DISABLE
Name	NTP Server
Details	Enter the domain name or IP address of the NTP server.
Range	When domain name is used: 0-128 character string (letters, numbers, period, hyphen) When IP address is used: 0.0.0.0 - 255.255.255.255
Default Value	(None)
Name	Manual Configuration
Details	Set the time setting manually.
Range	Year : 2019-2035 Month : 1-12 Day : 1-31 Hour : 00-23 Minute : 00-59
Default Value	(None)
Note	Configuration using AMC Manager [®] is not supported.

A-1-2. Serial Configuration

General Configuration

General Configuration

Name	Baud Rate[baud]
Details	Set the data transmission/reception speed for the port.
Range	300 600 1200 1800 2400 4800 9600 19200 28800 38400 57600 115200
Default Value	4800
Name	Bits per Character[bit]
Details	Set the number of bits per character.
Range	7/8
Default Value	8
Name	Stop bit[bit]
Details	Set the number of stop bits after each character.
Range	1/2
Default Value	2
Name	Parity
Details	Select the parity scheme for each character.
Range	None Odd Even
Default Value	None

Name	Flow Control
Details	Select the flow control method.
Range	None XON/XOFF RTS/CTS
Default Value	None

A-1-3. Security Configuration

Login Password Configuration

Name	New Password
Details	Configure the password for FBR-100AN. This password is used as authentication password when configuration is changed using Web browser.
Range	1-15 alphanumeric character
Default Value	(none)
Name	Confirm New Password
Details	Enter the same password as New Password .
Range	1-15 alphanumeric character
Default Value	(none)

IP Address Filter Configuration

Default Filter Mode

Name	Default Filter Mode
Details	Configure the access control setting (ALLOW / DENY) for all IP addresses. ALLOW : Allows access from all IP addresses. DENY : Denies access from all IP addresses. This setting is used with Filter Mode . When Default Filter Mode is set to DENY , FBR-100AN accepts access only from the devices whose range of IP address is allowed at Filter Mode . * When Default Filter Mode is set to DENY and no IP addresses are registered at the filter condition, this setting is invalidated and FBR-100AN accepts any accesses.
Bange	DENY
nange	ALLOW
Default Value	ALLOW

New Conditions

Name	Filter Mode
Details	Configure the filter mode (ALLOW / DENY) for the specified address range. ALLOW : Allows access from the registered IP address range. DENY : Denies access from the registered IP address range.
Range	DENY ALLOW
Default Value	DENY
Name	Starting Address
Details	Set the start address for address filter. Up to 20 addresses can be registered.
Range	0.0.0.0 - 255.255.255.255
Default Value	0.0.0
Name	Ending Address
Details	Set the end address for address filter. Up to 20 addresses can be registered.
Range	0.0.0.0 - 255.255.255.255
Default Value	0.0.0.0

Registered Condition Management

Name	Registered Conditions
Details	Shows the registered address filter conditions.
Range	(Filter Mode) : (Start Address) - (End Address)
Default Value	None (blank)
Name	Priority Configuration
Details	Set the priority of the registered conditions.
Range	↑: Set Priority Higher /↓: Set Priority Lower
Default Value	-

MAC Address Filter Configuration

MAC Address Filter Configuration

Name	Filter Type
	Set a security type for MAC Address filter (DENY/ALLOW).
Details	DENY : Denies access from the devices registered to MAC Address filter list. ALLOW : Allows access only from the devices registered to MAC Address filter.
Range	ALLOW DENY
Default Value	DENY
Name	MAC Address
Details	
Details	Set the MAC Address filter. By registering the MAC Address filter, access to FBR-100AN can be controlled. (Up to 20 addresses can be registered.)
Details	 Set the MAC Address filter. By registering the MAC Address filter, access to FBR-100AN can be controlled. (Up to 20 addresses can be registered.) * If the filter type is set to ALLOW and MAC Address (to allow access from) is not registered, access to FBR-100AN is invalidated.
Details Range	 Set the MAC Address filter. By registering the MAC Address filter, access to FBR-100AN can be controlled. (Up to 20 addresses can be registered.) * If the filter type is set to ALLOW and MAC Address (to allow access from) is not registered, access to FBR-100AN is invalidated. 00:00:00:00:00:01 - FF:FF:FF:FF:FE
Details Range Default Value	Set the MAC Address filter. By registering the MAC Address filter, access to FBR-100AN can be controlled. (Up to 20 addresses can be registered.) * If the filter type is set to ALLOW and MAC Address (to allow access from) is not registered, access to FBR-100AN is invalidated. 00:00:00:00:00:01 - FF:FF:FF:FF:FF:FE 00:00:00:00:00:00

A-2. List of Error Codes

Error Code	State/Solution
	FBR-100AN cannot communicate with CNC.
71-16	Check the IP address and port number of CNC.
	The following point name information cannot be obtained from CNC.
02XX	Eliminate from the data collection target and see how it works. Point name: ReadEmergency (emergency stop status) Point name: ReadMode (CNC operating mode) Point name: ReadRunStatus (CNC operating status)
	The following point name information cannot be obtained from CNC.
03XX	Eliminate from the data collection target and see how it works. Point name: ReadOperatorMessages (operator message display)
04XX	The following point name information cannot be obtained from CNC.
05XX 06XX	Eliminate from the data collection target and see how it works. Point name: ReadAlarmWithType (alarm message display)
	The following point name information cannot be obtained from CNC.
08XX	Eliminate from the data collection target and see how it works. Point name: AllPositionData (absolute position)
	The following point name information cannot be obtained from CNC.
09XX	Eliminate from the data collection target and see how it works. Point name: DynamicActualFeedrate (feed speed)
	The following point name information cannot be obtained from CNC.
11XX	Eliminate from the data collection target and see how it works. Point name: DynamicCurrentSequenceNumber (sequence number of the executed program)
	The following point name information cannot be obtained from CNC.
12XX	Eliminate from the data collection target and see how it works. Point name: MainProgramName (main program name) Point name: MainProgramComment (main program comment)
	The following point name information cannot be obtained from CNC.
13XX	Eliminate from the data collection target and see how it works. Point name: MainProgramName (main program name)
14XX	The following point name information cannot be obtained from CNC. Eliminate from the data collection target and see how it works.
	Point name: MainProgramComment (main program comment)

Error Code	State/Solution
	The following point name information cannot be obtained from CNC.
15XX	Eliminate from the data collection target and see how it works. Point name: ModalTCode (tool number)
	The following point name information cannot be obtained from CNC.
16XX	Eliminate from the data collection target and see how it works. Point name: FeedrateOverride (feed speed override) Point name: RapidOverride (rapid override) Point name: SpindleOverride (spindle override)
	The following point name information cannot be obtained from CNC.
17XX	Eliminate from the data collection target and see how it works. Point name: ReadProgramBlock (block of the executed program)
	The following point name information cannot be obtained from CNC.
18XX	Eliminate from the data collection target and see how it works. Point name: ServoLoad (moving axis load)
	The following point name information cannot be obtained from CNC.
19XX	Eliminate from the data collection target and see how it works. Point name: ReadSpindleLoads (spindle load)
	The following point name information cannot be obtained from CNC.
20XX	Eliminate from the data collection target and see how it works. Point name: ReadSpindleSpeeds (spindle speed)
	The following point name information cannot be obtained from CNC.
21XX	Eliminate from the data collection target and see how it works. Point name: ReadSpindleModes (spindle operating mode)
222/04	The following point name information cannot be obtained from CNC.
22XX 23XX	Eliminate from the data collection target and see how it works. Point name: ReadAxisNames (Effective axis name)
	The following point name information cannot be obtained from CNC.
28XX	Eliminate from the data collection target and see how it works. Point name: ReadPartCount (number of parts) Point name: FeedrateOverride (feed speed override)
Others	Capture the log and contact our customer support.

A-3. Activation

By registering the activation key to FBR-100AN, the optional function (non-free) can be enabled.

A-3-1. Registering Activation Key

The following explains how to register the issued activation key.

1. Turn on FBR-100AN while the DIP Switch 4 is ON.



Make sure that the DIP Switch 4 is ON.

 Open your Web browser and access the FBR-100AN's Web page. When the activation key registration page is displayed, enter the issued activation key and click **Register**.

Welcome to FBR-100A	<u>N.</u>	670
Г		1
	Enter the activation key you gat and click [Register]. This product will automatically be restarted.	
	Activation Key	
L	Register	J
Γ	When you do not want to register the activation ley, turn off the DIP Switch 4 of this product and then restart it.	1
L	Restart	
Г	Select Language	1
	English 🗸	
L		



- For details on how to access the FBR-100AN's Web page using the Web browser, refer to **3-2-2. Displaying FBR-100AN's Web Page.**
- When the activation key has already been registered, the activation key registration page does not appear.
 When you do not want to register the activation key, turn off the DIP Switch 4 (same as factory default setting) and click **Restart**.

3. Click **OK** to the confirmation message. The activation key will be registered and FBR-100AN will automatically be restarted.





• If the activation key is not correct, the registration does not perform correctly.

Note

A-3-2. Clearing Activation Key

1. Click Activation Initialization from the configuration menu.



TIP

• This menu (**Activation Initialization**) is not displayed when the activation key is not registered.

2. When the activation initialization page is displayed, click **Execute**.

Select Language	Activation Initialization	
Status System MConnect Metwork Conf. General Wreless LAN(STA) MTConnect FFP FTP Time	Activation Initialization	e Har
Serial Conf. General Security Conf. Logh Reserved PAdness Filter MAC Address Filter MacA address Filter Log Output Deg Output Deg Cutput		

3. Click **OK** to the confirmation message. The registered activation key and setting will be deleted.





The setting of the function (that has been enabled by registering the activation key) will remain even if the activation key is cleared. To reset the setting of the enabled function, refer to **5-1. Factory Default Configuration**.

A-4. Using OPC UA Activation

The following explains the basic procedure to use the OPC UA function of FBR-100AN.

A-4-1. What is OPC UA?

- OPC UA (OPC Unified Architecture) is an open and international data exchange standard that is used in Industry 4.0. This realizes secure interconnect communication across multi-vendor products and different operating systems.
- By applying the OPC UA activation to FBR-100AN, the following can be supported.
 - FBR-100AN can be used as the OPC UA server.
 - Collection and exchange of the operating data in compliance with the Industry 4.0 platform umati (universal machine technology interface) for machine tools
 - Data exchange and unified operation monitoring for OPC UA-compatible PLCs and HMIs





To use the OPC UA activation, the activation key needs to be registered in advance. For details, refer to **A-3-1. Registering Activation Key**.

A-4-2. Network Connection to Use OPC UA Activation

Up to 3 CNC devices can be used for the OPC UA function of FBR-100AN.

The client software of the upper smart factory system can collect the operating data of each CNC device by individually accessing each OPC UA server that runs inside FBR-100AN.



^(* 1) When reading information of multiple CNC devices from the OPC UA client, specify the number of communication port assigned to each OPC UA server.

• FBR-100AN does not contain the OPC UA client-compatible software. Please purchase the one that is commercially available in the market.



• For the CNC devices that can be used by this activation and the detailed configuration method, see the FBR-100AN's catalog or visit our homepage.

A-4-3. Showing OPC UA Status

OPC UA status shows the OPC UA setting.

1 Open your Web browser and access the FBR-100AN's Web page.



• For details on how to access the FBR-100AN's Web page using the Web browser, refer to **3-2-2. Displaying** FBR-100AN's Web Page.

2. Click OPC UA from the configuration menu.



3. The OPC UA Status page is displayed.


A-4-4. OPC UA Setting

The following explains how to configure the OPC UA setting. For details, see the reference documents that can be found on the Silex Technology's website.

1. Open your Web browser and access the FBR-100AN's Web page.



• For details on how to access the FBR-100AN's Web page using the Web browser, refer to **3-2-2. Displaying** FBR-100AN's Web Page.

2. Click OPC UA from the configuration menu.



3. The **OPC UA Configuration** page is displayed. Configure each setting.

OPC UA Configuration		0
al Configuration Security Configura	tion	
	En Help	~
 ONC Configuration1 Name 	Value	
OPOUA Port	4940	
ONC IP Address		
CNC Port	8193	
OPC UA Collecting Information	Browse Import Delete	
 ONC Configuration? 		
Name	Value	
OPCUA Port	4841	
ONC IP Address	0000 Connection	
ONC Port	8193	
OPC UA Collecting Information	Browse Import Delete	
 ONC ConfigurationS 		
Name	Value	
OPCUA Port	4842	
ONC IP Address	0000 Connection	
ONC Port	8193	
OPC UA Collecting Information	Browse Impart Delete	\sim

4. Check the settings and click Submit.





The entered settings will be cleared if other configuration items are clicked on the menu.
 To save the entered settings, click **Submit**.

5. The confirmation message for restart is displayed.

To continue the configuration, click a link to the configuration. Click **Restart** to take effect of the new setting when the necessary configuration is finished.

General Configurat	on Security Configuration				
► Setting is If you need to To take effect <u>General Confl</u> <u>Security Con</u> <u>Restart</u>	completed. continue setting, please selec c of this setting, please restart <u>suration</u> <u>to an </u>	t the link below and c	ntinue with setting.		
	Do not turn off f	BR-100AN	when the resta	art is in pro	gress.



• FBR-100AN can also be restarted by clicking **Restart** from the configuration menu.

Note

6. When the restart is finished and the login page of FBR-100AN is displayed again, the configuration is completed.

A-5. Using Modbus TCP Activation

The following explains the basic procedure to use the Modbus TCP function of FBR-100AN.

A-5-1. Features of Modbus TCP

- By applying Modbus TCP activation, FBR-100AN can operate in Modbus TCP (slave).
- The upper Modbus TCP (master) device can collect the information of CNC via the slave device.
- The standard MT-Connect function of FBR-100AN cannot be used at the same time.
- Only FANUC CNC is supported.
- It is possible to collect only the information that can be collected at the default point.
- Up to 10 macro variables can be collected.
- Up to 10 PMCs can be collected when the address type is 4 bytes.

[System configuration]





To use the Modbus TCP activation, the activation key needs to be registered in advance.

For details, refer to A-3-1. Registering Activation Key.

A-5-2. Communication for Using Modbus TCP Activation

FBR-100AN can operate as Modbus TCP (slave) and return CNC information in response to the command requested by the upper Modbus TCP (master).



- Only one Modbus TCP (master) can be connected.
- The master device can specify the maximum 125 words for a read size (compliant with Modbus TCP specifications).
- Only Function code 0x04 can be used as commands (for reading the input register value). Other code (write code, etc.) is not supported.
- The character string is ASCII code. An ASCII code will be returned even for a numerical value (a numerical value will be returned only for PMC).
- Set the address by a word (2 bytes), and set the character string by 1 byte. The byte order is big endian.

[Data setting sample]

Туре	Value	Data
String	abc	0x6162 0x6300
Numerical value	12345	0x3039

When the NTP client is enabled, FBR-100AN starts after synchronizing the time with the NTP server. If the synchronization does not finish in 360 sec, FBR-100AN starts without it.



- FBR-100AN does not include software or hardware that supports Modbus TCP (master). Please prepare the commercially-available one that can work as Modbus TCP (master).
- For the CNC devices that can be used by this activation and the detailed configuration method, see the FBR-100AN's catalog or visit our homepage.

A-5-3. Showing Modbus TCP Status

Modbus TCP status shows the Modbus TCP setting.

1. Open your Web browser and access the FBR-100AN's Web page.



• For details on how to access the FBR-100AN's Web page using the Web browser, refer to **3-2-2. Displaying** FBR-100AN's Web Page.

2. Click Modbus TCP from the configuration menu.



3. The **Modbus TCP Status** page is displayed.



A-5-4. Modbus TCP Setting

The following explains how to configure the Modbus TCP setting. For details, see the reference documents that can be found on the Silex Technology's website.

1. Open your Web browser and access the FBR-100AN's Web page.



• For details on how to access the FBR-100AN's Web page using the Web browser, refer to **3-2-2. Displaying** FBR-100AN's Web Page.

2. Click Modbus TCP from the configuration menu.



3. The **Modbus TCP Configuration** page is displayed. Configure each setting.

Modbus TCP Configuration	
us TCP Configurartion	
General Configuration	
Name	Value
Modbus TCP Port	502
CNC IP Address	
ONO Deat	Connection
CNC Part	8193
 CNC Information Configuration 	
Name	Value
Emergency stop state Operator Messages Alarm Messages CNO Mode	ON v B00 ON v 1000 ON v 1000
Part Count	
CNC Running Status	
Absolute Position	
Actual Feedrate	
Current Program Sequence Number	ON ¥ 800
Main Program Name	ON ¥ 2000
Main Program Comment	ON ¥ 2000
Tool Number	ON V 800
Feedrate Override	ON ¥ 1000
Program Block	ON V 800
Servo Load	ON ¥ 800
Servo Load Current	ON V 800
Spindle Load	ON ¥ 800
Spindle Speed	ON ¥ 800

4. Check the settings and click **Submit**.





The entered settings will be cleared if other configuration items are clicked on the menu.
 To save the entered settings, click **Submit**.

5. The confirmation message for restart is displayed.

To continue the configuration, click a link to the configuration. Click **Restart** to take effect of the new setting when the necessary configuration is

finished.

lr.					
	Modhup TCP Configuration				
	Wodbus FOF Configuration	·		r i i i i i i i i i i i i i i i i i i i	
Ρ.			 		
	Setting is completed				
	To take effect of this se	tting please restart			
	Restart				



• Do not turn off FBR-100AN when the restart is in progress.



• FBR-100AN can also be restarted by clicking **Restart** from the configuration menu.

Note

6. When the restart is finished and the login page of FBR-100AN is displayed again, the configuration is completed.

(blank page)