

Industrial Access Point AP-800AX Setup Guide

silex
technology

WA107780XB

Thank you for purchasing the industrial Access Point "AP-800AX".

AP-800AX is an industrial Access Point that supports Wi-Fi 6 (IEEE 802.11ax) and provides stable communication even in environments where wireless interference occurs, such as factories and warehouses. As an AMC Mesh function is supported, wide coverage can be achieved by connecting multiple AP-800AX units.


This document explains how to configure and use AP-800AX in a wireless network.

Package Contents


Following items are contained in the product package.

- ☐ AP-800AX
- ☐ Setup Guide (this document)
- ☐ GPL license notice
- ☐ Rubber foot (4pcs)
- ☐ Warranty Guide

Name of Parts

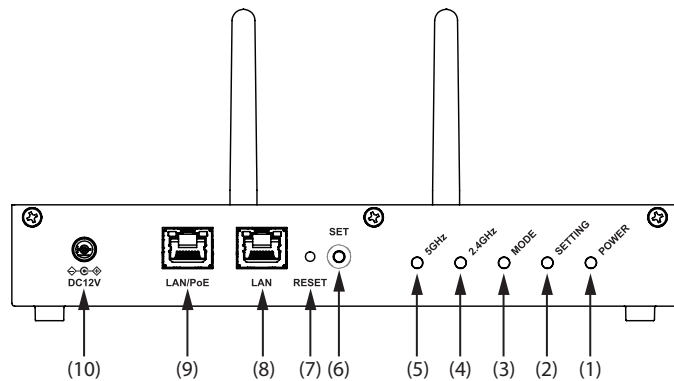

Network Port (8), (9)

 

- (1) POWER LED (Green/Red)
- (2) SETTING LED (Green/Red)
- (3) MODE LED (Green/Red)
- (4) 2.4GHz LED (Green/Red)
- (5) 5GHz LED (Green/Red)
- (6) SET Switch
- (7) RESET Switch
- (8) LAN Port
- (9) LAN Port (PoE)
- (10) DC Connector
- (11) Status LED (Green)
- (12) Link LED (Orange)

For detailed function of each part, please refer to the User's Manual.

Configuration Method

For configuration, use the AP-800AX's Web page or the AMC Manager® utility. There are 3 configuration methods below.

- 1) Configuration using Configuration Mode (See this document)
- 2) Configuration using AMC Manager® (See this document)
- 3) Configuration using Smart Wireless Setup (See User's Manual)

Necessary Items

Following items are required.

- ☐ LAN cable
- ☐ PC to use for configuration
- ☐ PoE+ HUB or PoE injector
- ☐ User's Manual (download from the Silex Technology's website)
- ☐ AMC Manager® (when AMC Manager® is used)

* If communication is received from a PC other than the PC you are using for configuration, the configuration mode cannot be used. Also, if a PoE HUB is an intelligent HUB that supports STP, the configuration mode may not be available.

Downloading User's Manual

The User's Manual can be downloaded from the Silex Technology's website. Access the URL below to download it.


<https://www.silextechnology.com/>

- 1 When the website is displayed, click **Support** from the top menu.
- 2 Select the product model and download the User's Manual.

* To download AMC Manager®, click **Software Download**. In the **Software Download** page, click **AMC Manager®**.


Configuration Using Configuration Mode

- 1 Connect one end of LAN cable to the PC and the other end to "LAN" port of AP-800AX.

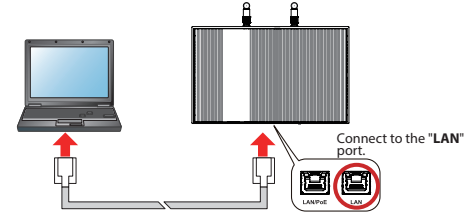

* If wireless LAN is enabled on the PC, please disable it.

- 2 Prepare another LAN cable and connect one end of the LAN cable to PoE HUB and the other end to "LAN/PoE" port of AP-800AX.

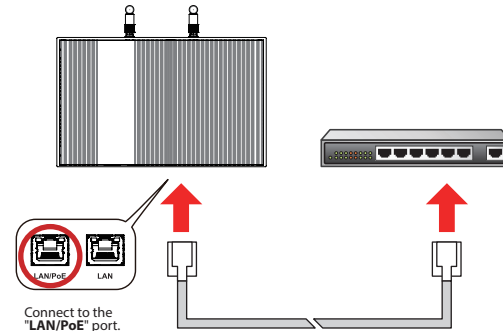

- 3 Check that AP-800AX can communicate with the PC.


1. Confirm that an IP address is properly configured on the PC.

How to check on Windows 11


* See the icon in the taskbar () to check that the wired LAN is ready to use in the PC.

2. Confirm that a wireless LAN is disabled on the PC.

- 4 When AP-800AX is turned on, press and hold the RESET Switch with a pointed object such as a pen (1). Keep holding it, and when the MODE LED blinks orange (2), release the switch (3) (it takes about 5 sec until the MODE LED blinks). The configuration mode is started, and you can now configure AP-800AX from the PC.

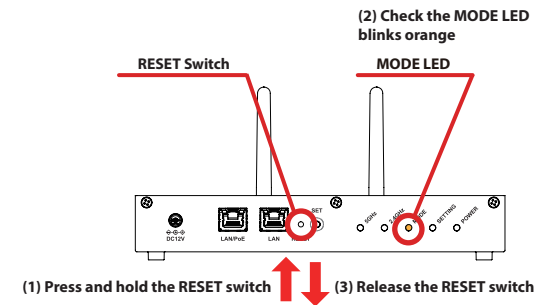


- 5 Start a Web browser on the PC you are using for configuration. When the login password configuration page appears, enter the password to configure for AP-800AX and click **Submit**.

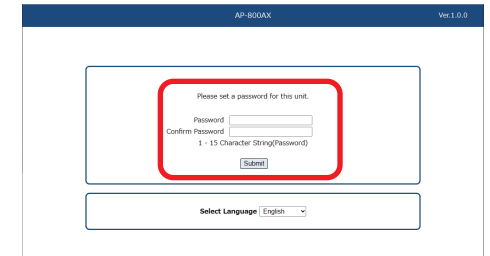


* Make a note of the password so that you can refer when you have forgotten it.

* The login password configuration page is displayed only when AP-800AX has the factory default settings. Once configured, it will not be displayed again.

 
* If the password configuration page is not displayed, enter "http://silex" in the address bar of the Web browser and press the Enter key.




- 6 The login page is displayed. Enter the login password you have configured and click **Login**.

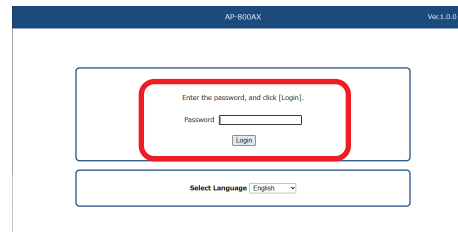


- 7 The Web page of AP-800AX is displayed. Select the page you want to configure from the menu.

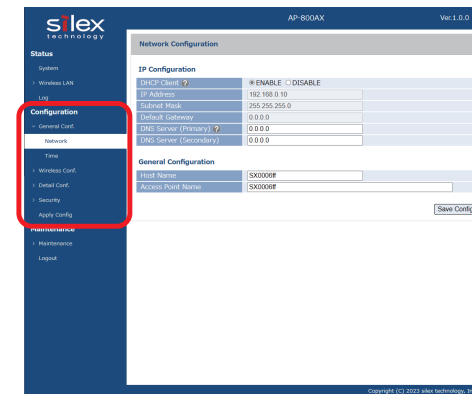


- 8 Configure the necessary settings and click **Save Config** at the bottom right of the page.

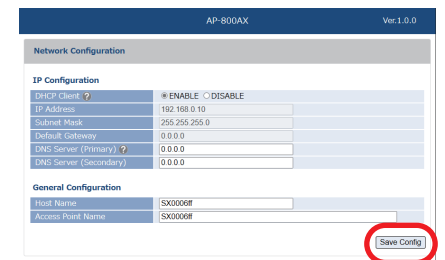

 
* For details on each setting item, refer to the Help or User's Manual. The Help can be displayed by clicking the Help icon (?) to the right of the setting item.



- 9 When the settings have been saved, the following message is displayed. To continue the configuration, select the page you want to configure from the menu, and configure the necessary settings. When the configuration is finished for all necessary settings, click **Apply Config**.

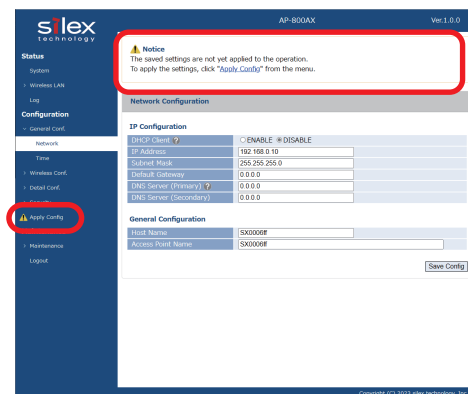

- 10 When the **Apply Config** page is displayed, click **Restart**.

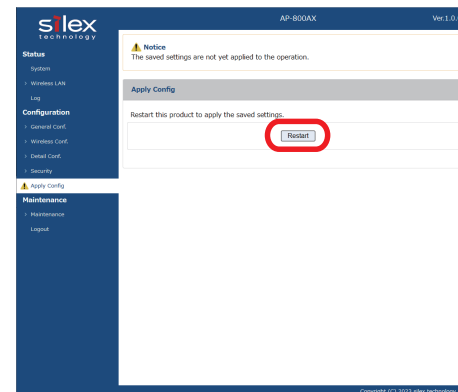

- 11 Remove a LAN cable from AP-800AX and the PC.

The configuration using configuration mode is completed.

Configuration Using AMC Manager®

- 1 Download AMC Manager® and install it to the PC (For how to download, see **Downloading User's Manual** on the back).

* Download and use the latest version of AMC Manager®.
* During the explanation of initial configuration, AMC Manager® Free (free version) will be used.
* Although AMC Manager® Free is used for explanation, the configuration method will basically be the same even if you are using AMC Manager® (paid version) for which you purchased a license key.

- 2 Change the wired LAN network setting of the PC to allow communication with AP-800AX.


Sample network setting)

When the IP address of AP-800AX is "169.254.30.127", change the wired LAN network setting of the PC as follows.

- IP Address : 169.254.30.100
- Subnet Mask : 255.255.0.0


* Please be sure to set a unique IP address for your PC, that is not used by AP-800AX.
* By default, AP-800AX automatically obtains an IP address since the DHCP client function is enabled. When there is no DHCP server in your environment, AP-800AX operates with the address "169.254.xxx.xxx".

3 Connect one end of LAN cable to the PC and the other end to "LAN" port of AP-800AX.

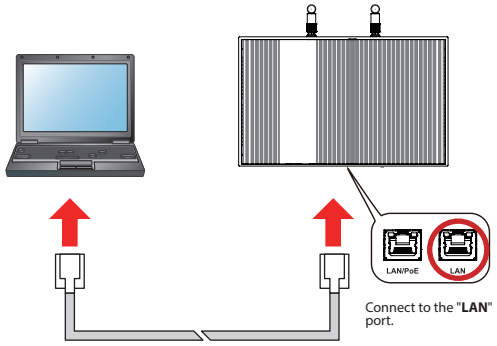


* If wireless LAN is enabled on the PC, please disable it.


4 Prepare another LAN cable and connect one end of the LAN cable to PoE HUB and the other end to "LAN/PoE" port of AP-800AX.

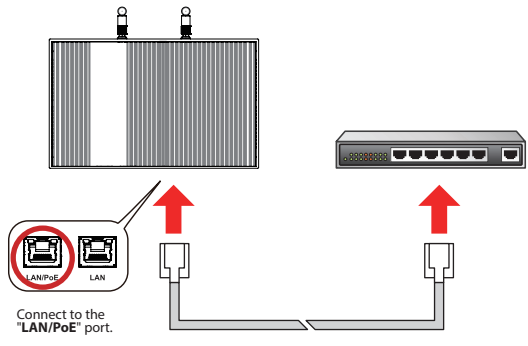

5 Click **Start - silex Tools - AMC Manager** to start AMC Manager®. When AMC Manager® is started, AP-800AX is displayed in a device list. Select AP-800AX and click the icon **Configure the device** ().

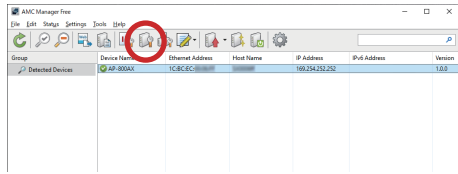


6 The password registration window is displayed. Enter the login password to configure for AP-800AX and click **Register**.

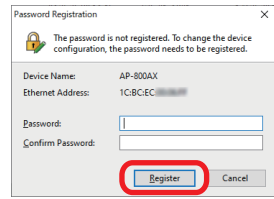


* The login password configuration page is displayed only when AP-800AX has the factory default settings. Once configured, it will not be displayed again.
* Make a note of the password so that you can refer when you have forgot it.

7 When the password configuration is finished, AP-800AX is restarted. Click **Close** when the window below appears.

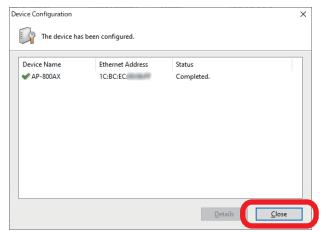


8 From the AMC Manager®'s main window, select AP-800AX again and click the icon **Configure the device** ().

9 When the password entry screen is displayed, enter the password that you have set at 6, and click **OK**.

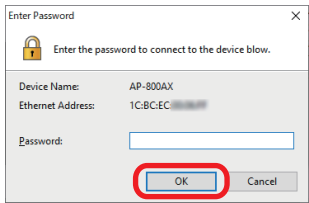


10 The device configuration window appears. If a configuration category is clicked on the left side of the screen (1), the corresponding setting is displayed on the right side (2). Check the check boxes of the items to update, and change the values (3).

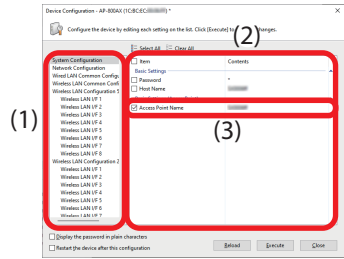


*The setting whose check box is checked will be configured to AP-800AX. For the setting you do not want to change, clear the check box.

 11 When the necessary settings are changed, check the check box of **Restart the device after this configuration** (1), and click **Execute** (2).



 12 The configuration result is displayed. AP-800AX will automatically restart and operate with the new settings. Click **Close**.




13 Remove a LAN cable from AP-800AX and the PC.


The configuration using AMC Manager® is finished.

Product Installation

1 Align the bracket (Bracket Type XI) with the screw holes on the back of AP-800AX and fasten them with screws. (* The bracket is sold separately.)

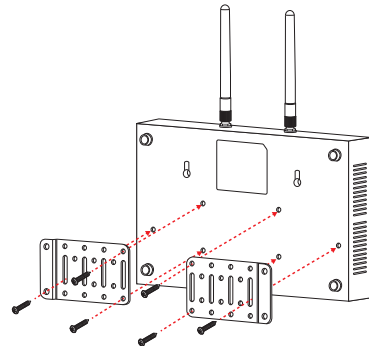


2 After attaching the bracket to AP-800AX, hold it to the wall and mark the positions of the four screw holes. Drill a pilot hole at the marked positions on the wall and insert the anchors.

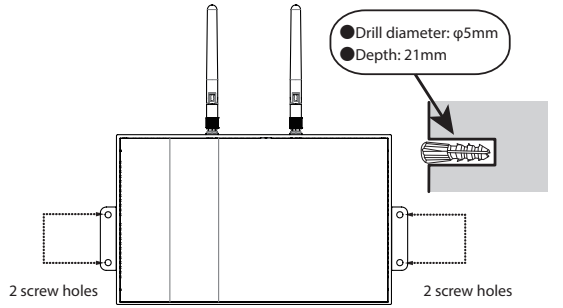


* Please be careful not to tilt AP-800AX.

3 Fix AP-800AX to the wall. Align the screw holes of the bracket with the anchors inserted at 2 and screw them.

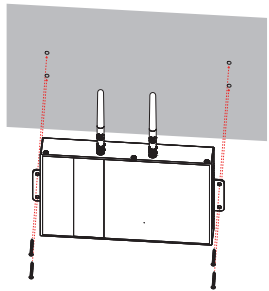

* Silex Technology is not responsible for any damages caused by insufficient mounting. Make sure that AP-800AX is securely fixed to the wall so that it does not fall due to the weight of the product and cables.


4 Connect one end of the LAN cable to PoE HUB and the other end to "LAN/PoE" port of AP-800AX.

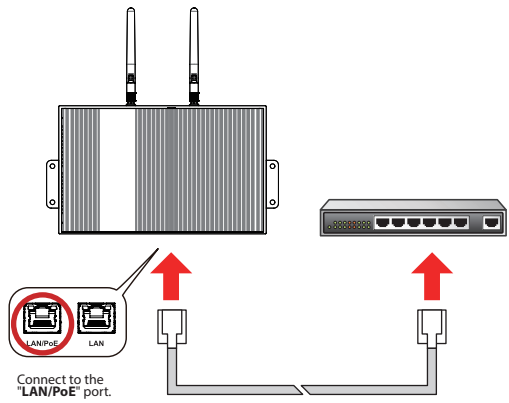

Factory Default Configuration


Follow the instructions below to reset AP-800AX to the factory default setting.

1 Remove a LAN cable that connects AP-800AX to the PoE HUB.

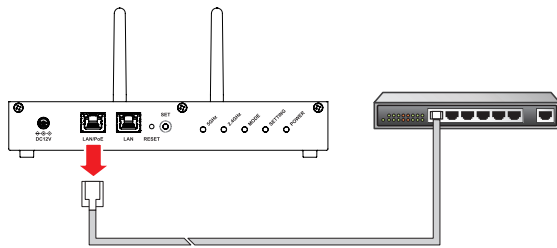

2 While pressing the RESET switch of AP-800AX with a pointed object such as a pen (1), insert the LAN cable back into the "LAN/PoE" port (2). Keep pressing the RESET switch.


(1) Press and hold the RESET switch

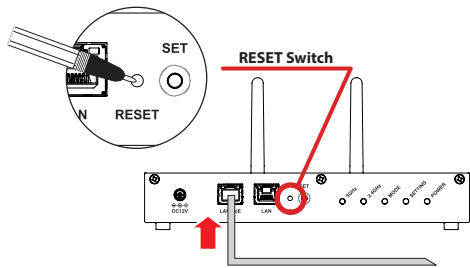

(2) Insert the LAN cable

3 When the SETTING LED turns orange (1), release the RESET switch (2).


(1) Check the SETTING LED turns orange

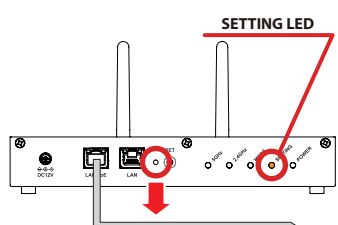

(2) Release the RESET switch

4 The factory default configuration begins. When the POWER LED of AP-800AX turns green, the factory default configuration is completed.

Check the POWER LED turns green

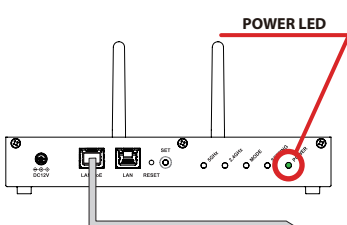

AP-800AX has been reset to the factory defaults.

Trademarks

- AMC Manager® is a registered trademark of Silex Technology, Inc.
- Wi-Fi® is a registered trademark of Wi-Fi Alliance.
- Windows is a registered trademark of Microsoft Corporation in the United States and/or other countries.
- Other company names and product names contained in this document are trademarks or registered trademarks of their respective companies.

Customer Support Center / 客户支持中心

Customer Support Center information

	E-mail
USA	support@silexamerica.com

■ 有关本产品需要咨询时，请联系本公司的客户支持中心

电话支持

010-64403958

转客户支持

微信公众号



产品中有害物质的名称及含量信息表

部件名称	有害物质									
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr VI)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	邻苯二甲酸 二(2-乙基)己酯 (DEHP)	邻苯二甲酸 丁基苄酯 (BBP)	邻苯二甲酸 二正丁酯 (DBP)	邻苯二甲酸 二异丁酯 (DIBP)
电路板	×	○	○	○	○	○	○	○	○	○
外壳	○	○	○	○	○	○	○	○	○	○
天线	×	○	○	○	○	○	○	○	○	○
垫脚	○	○	○	○	○	○	○	○	○	○

注1: ○: 表示该有害物质在该部件所有均质材料中的含量均满足电器电子产品有害物质限制使用国家标准要求。
×: 表示该有害物质至少在该部件的某一均质材料中的含量不满足电器电子产品有害物质限制使用国家标准要求。
注2: 以上未列出的部件, 表明其有害物质含量均满足电器电子产品有害物质限制使用国家标准要求。



左侧的标识, 在中国代表本产品含有的有害物质 (根据GB/T 26572所规定的有害物质) 超出规定值。其中的数字代表产品在正常使用的情况下, 从生产日开始算起有害物质不会释放到环境中的年数。

请保管好本说明书。