

Firmware Update Procedure


This document describes how to upgrade the firmware of BR-300AN.

The firmware can be updated using the Web browser interface of BR-300AN.


* In this document, Windows 10 is used as an example. However, the procedure will be the same if you are using an OS other than Windows 10.

* Display may vary depending on the Web browser.


- 1** Connect BR-300AN to the PC using the network cable that came with BR-300AN.

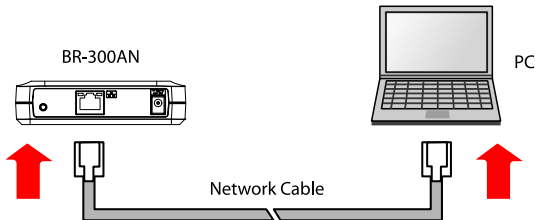

- 2** Connect the AC adaptor to BR-300AN, and the AC adaptor's plug to an electrical outlet.

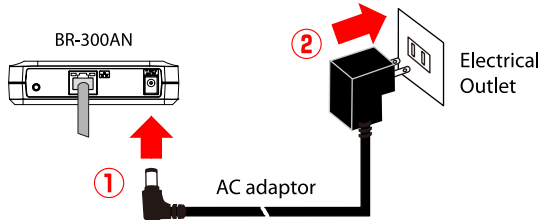


- 3** When the POWER LED (at the top) turns ON, press and hold the push switch (at the front). Release the push switch when WLAN LED and STATUS LED start to blink together (It may take 20sec until blinking). BR-300AN will start running in the **Configuration Mode** then. Now you can upgrade the firmware of BR-300AN from the PC that has been connected to BR-300AN via a network cable.

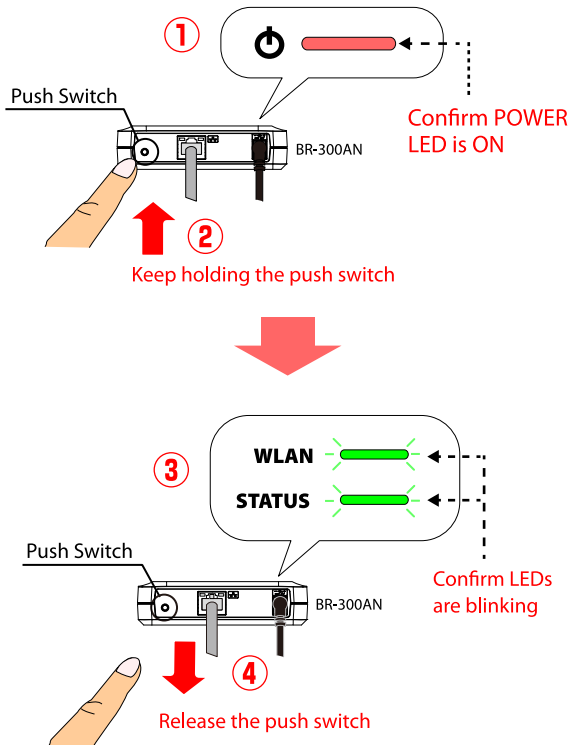

* If wireless LAN is enabled on your PC, please disable it.

- 4** Start your Web browser from the PC and then the Web interface of BR-300AN will be displayed. Click **Firmware Update**.




* If the Web interface is not displayed, enter "**http://silex**" in the address bar of the Web browser and press the Enter key.




* If a password is set to BR-300AN, the login page is displayed. Enter the password and click **Login**.

* When the login password configuration page appears, enter the password to configure for BR-300AN. After the login password is configured, enter it at the login page.

- 5** The **Firmware Update** page appears. Click the button to the right of **New firmware**, and select the firmware file (**BR-300AN.bin**) that has been downloaded to the PC, and click **Update**.

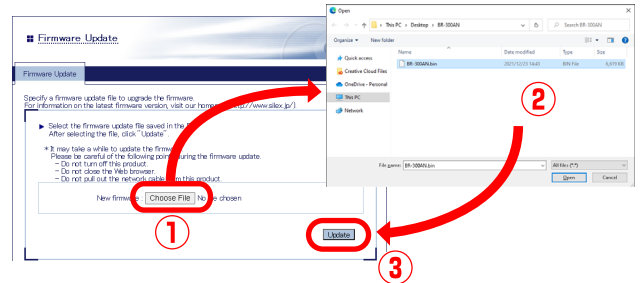

- 6** Click **OK** to the confirmation message. The firmware update will begin. All LEDs on top of BR-300AN turn ON while the firmware update is in process.

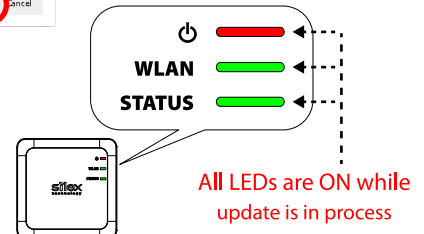

* Do not turn off BR-300AN or close your Web browser while the firmware update is in process.

- 7** When the LED status changed from above, turn off BR-300AN by unplugging AC adaptor from the electrical outlet. The firmware update has been completed now.